Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

DIRECT (Panel is exposed fastened & mounted Direct-to-the roof-deck)

GRANITE-RIDGE Shingle (Panel is hidden fastened & mounted Direct-to-the roof-deck)

\*Panel fastener lengths have been exaggerated to show that they must penetrate the decking and/or structural member.

**Eave Riser:** Boral Steel Eave Riser Metal. Fasten 12" O.C. with corrosion resistant nails or screws with enough length to penetrate decking a minimum of  $\frac{3}{8}$ ".

**Boral Steel Drip-edge Metal:** Install tight to structure.

Profiles:
PINE-CREST Shake
BARREL-VAULT Tile
PACIFIC Tile
COTTAGE Shingle

Direct
Eave Riser with drip-edge

Boral Steel Stone Coated Roofing 7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Panels: Install bottom panel to extend past

surface of panel. Nose and hidden fastener must penetrate the decking a minimum of  $\frac{3}{8}$ ". The nose fastener does not require

fascia  $\frac{1}{2}$ ". Seal and chip screws at top

sealant.

Drawings are not to scale