



## Partition Wall-Roof Connection

- Notes:
1. Fasteners required to secure the Head Angle to the roof structure are determined by the type of roof structure.
  2. Install the exterior Head Angle after the panels and FIP Urethane foam are in place.