 


"SS-04-1" BASE ROOF FLASH

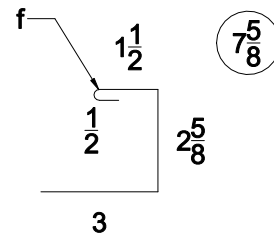

"SS-03-1" GABLE FILLER

ERECTOR NOTES:

- * IF "FSS-18" ROOF PANEL DOES NOT END ON A HIGH RIB THEN THE PANEL MUST BE FIELD SLIT ALLOWING FOR 2" TO BE BENT INTO A VERTICAL LEG AND USED IN CONJUNCTION WITH THE "SS-03-1" GABLE FILLER.
- START BASE ROOF FLASH @ EAVE & PROCEED UPWARDS CAULKING AND LAPPING EACH 4" MIN.
- "A" DIMENSION VARIES DUE TO CONSTRUCTION VARIATIONS.



BOX 515 RAILROAD STREET
SANDY LAKE, PENNSYLVANIA 16145-0515
PHONE: 800-245-0396 ° FAX: 724-376-3864

"Fss-18" Standing
Segm Details

Base Roof Detail

DRAWN BY: RW

DATE: 7-13-00

DRAWING NO.

CHECKED BY: CANON

DATE:

FSS18-15