

 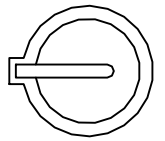
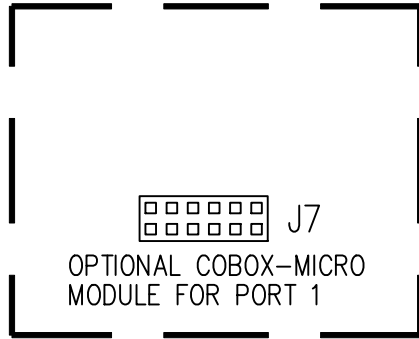


PW6KxIC INTELLIGENT CONTROLLER

(REFER TO ASSOCIATED INSTALLATION MANUALS FOR FURTHER INFORMATION)





BT1
BR2325
(3V LITHIUM)

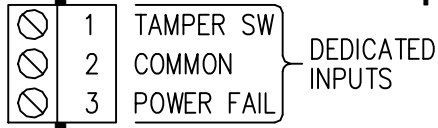



ETHERNET
CONNECTION

PORT 0

 
- J5 - IN = PORT 1 TERMINATION ACTIVE
- J5 - OUT = PORT 1 TERMINATION INACTIVE
- J3 - IN = PORT 2 TERMINATION ACTIVE
- J3 - OUT = PORT 2 TERMINATION INACTIVE
- J4 - IN = PORT 3 TERMINATION ACTIVE
- J4 - OUT = PORT 3 TERMINATION INACTIVE

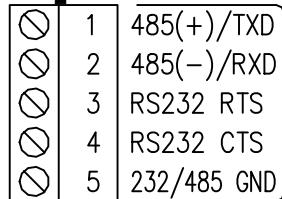

- 1-2 = PORT 1 RS-485
- 2-3 = PORT 1 RS-232

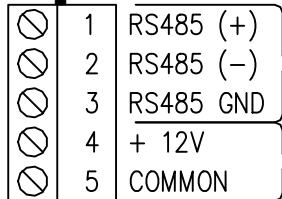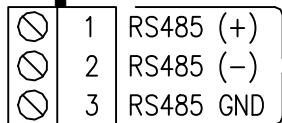

 - D1 (1)
- D2 (2)
- D3 (3)
- D4 (4)
- D5 (5)
- D6 (6)



J2

EXPANSION CONNECTOR

1.0"

25mm