

Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

DIRECT (Panel is exposed fastened & mounted Direct-to-the roof-deck)


GRANITE-RIDGE Shingle (Panel is hidden fastened & mounted Direct-to-the roof-deck)

Architectural details provided for Boral Steel® customers only

***Batten Fasteners omitted for clarity.**

See fastening drawings for panel and batten attachment.

Battens: to be nominal 2"x2" spruce pine fir #2 or better.
Fastener number, spacing and size as per fastener chart.
Install using appropriate Boral Steel "Batten Spacers". Top batten space may be "Short".

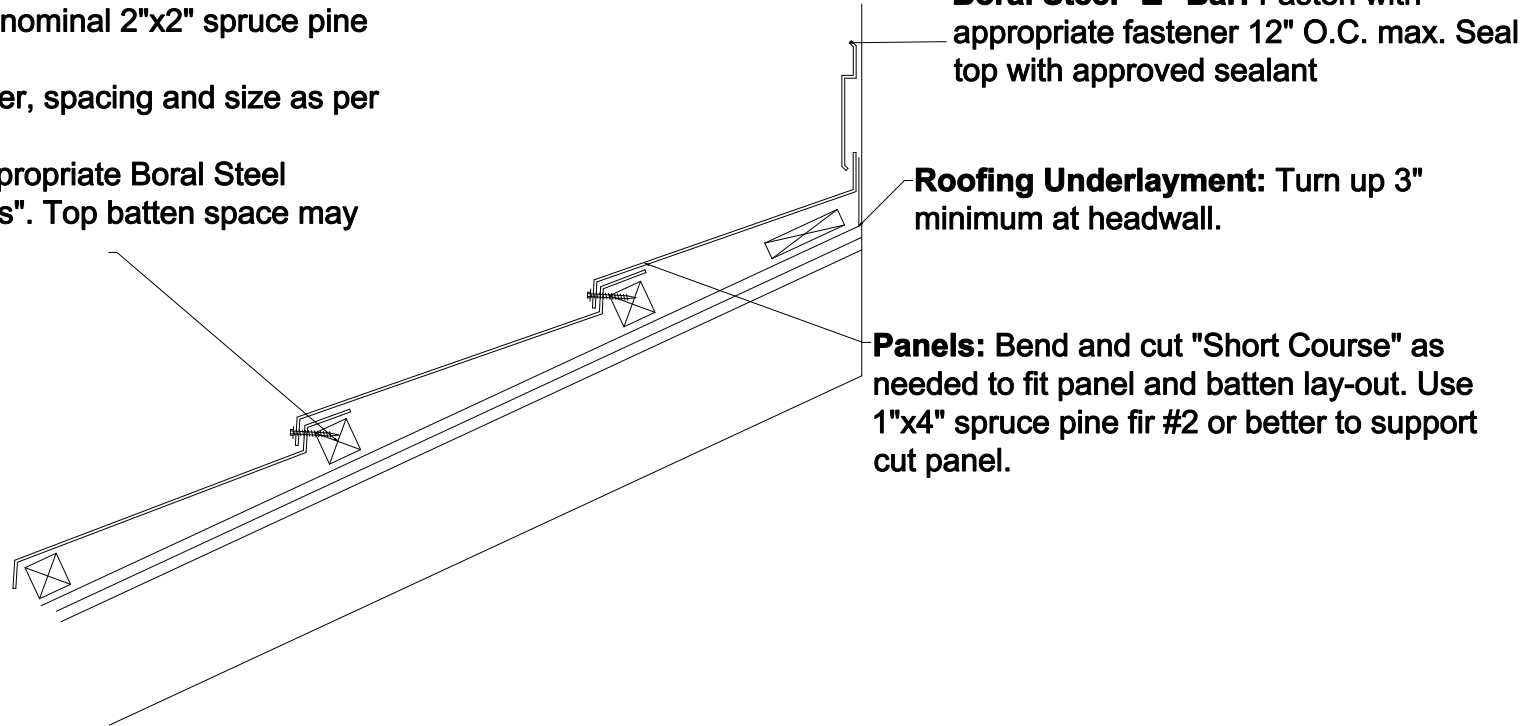

Boral Steel "Z" Bar: Fasten with appropriate fastener 12" O.C. max. Seal top with approved sealant

Roofing Underlayment: Turn up 3" minimum at headwall.

Panels: Bend and cut "Short Course" as needed to fit panel and batten lay-out. Use 1"x4" spruce pine fir #2 or better to support cut panel.

Profiles:

PINE-CREST Shake

BARREL-VAULT Tile

PACIFIC Tile

Batten Spacing

PINE-CREST Shake: 14 $\frac{1}{4}$ "

PACIFIC Tile: 14 $\frac{1}{4}$ "

BARREL-VAULT Tile:: 14"

**BATTEN
Headwall with Z-Bar**

Boral Steel Stone Coated Roofing
7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings
are not to
scale