

Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

**BATTEN** (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

**DIRECT** (Panel is exposed fastened & mounted Direct-to-the roof-deck)


**GRANITE-RIDGE Shingle** (Panel is hidden fastened & mounted Direct-to-the roof-deck)

Architectural details provided for Boral Steel® customers only

**\*Batten Fasteners omitted for clarity.  
See fastening drawings for panel and batten attachment.**

**Battens:** to be nominal 2"x2" spruce pine fir #2 or better.  
Fastener number, spacing and size as per fastener chart.  
Install using appropriate Boral Steel "Batten Spacers".

**Boral Trim Cap Rake Metal:**  
Fasten at top flange.

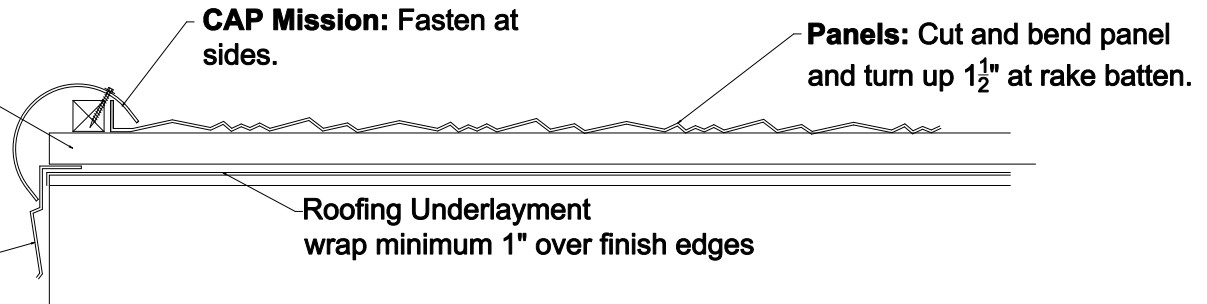


**Batten Spacing**

PINE-CREST Shake: 14 <sup>1</sup>/<sub>4</sub>"

PACIFIC Tile: 14 <sup>1</sup>/<sub>4</sub>"

BARREL-VAULT Tile: 14"

**Boral Trim Cap Rake:** Fasten at top flange.

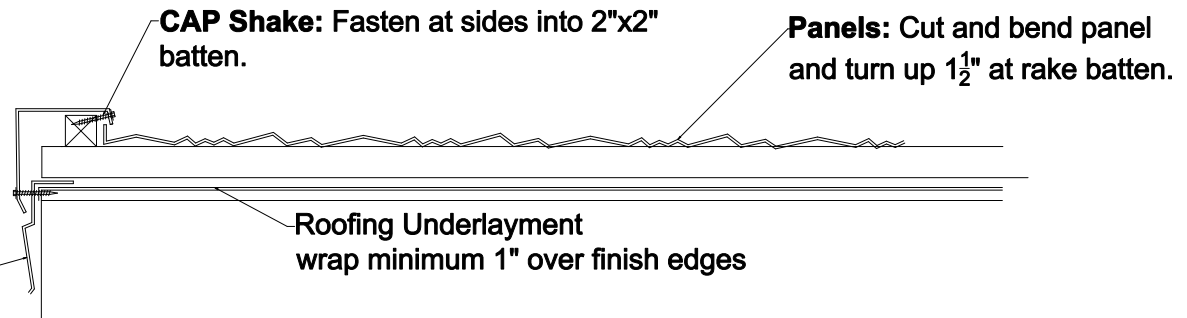

Profiles:

PINE-CREST Shake

BARREL-VAULT Tile

PACIFIC Tile

**BATTEN  
Rake-Gable CAP with Trim Cap  
Rake**

**Boral Steel Stone Coated Roofing**  
7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings  
are not to  
scale