

*Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:*

**BATTEN** (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

**DIRECT** (Panel is exposed fastened & mounted Direct-to-the roof-deck)

**GRANITE-RIDGE Shingle** (Panel is hidden fastened & mounted Direct-to-the roof-deck)

*Architectural details provided for Boral Steel® customers only*


**\*Batten Fasteners omitted for clarity.**

**See fastening drawings for panel and batten attachment.**

**Battens:** to be nominal 2"x2" spruce pine fir #2 or better fastened to counter battens. Fastener number, spacing and size as per fastener chart. Install using appropriate Boral Steel "Batten Spacers". Top batten space may be "Short".

**CAP Barrel Ridge Trim:** Fasten at sides. Seal and chip exposed screw.

**Panels:** Bend and cut top course "Short Course" as needed to fit batten lay-out.

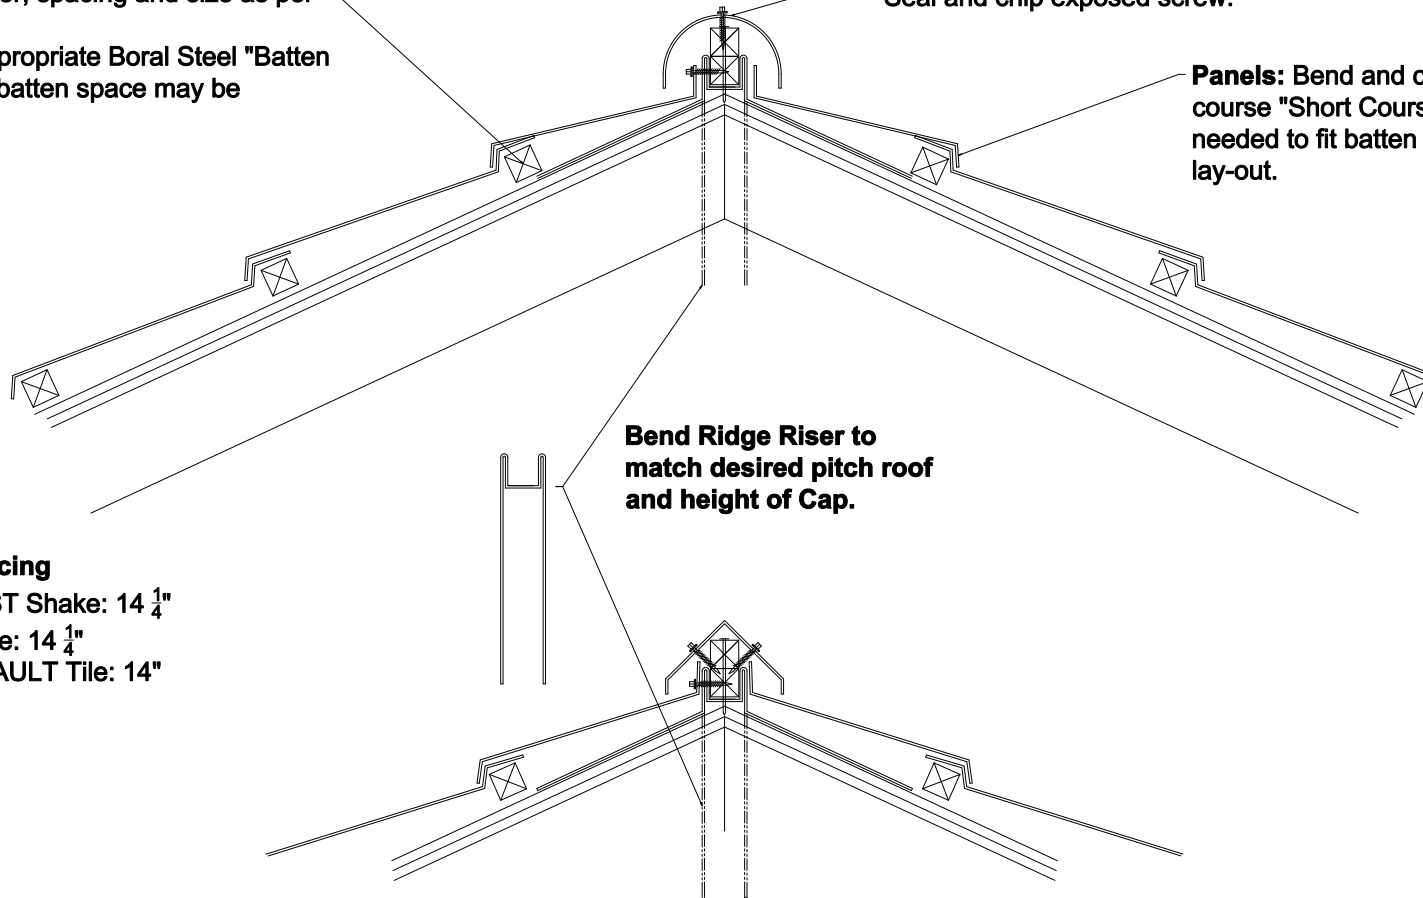

**Batten Spacing**

PINE-CREST Shake: 14 1/4"

PACIFIC Tile: 14 1/4"

BARREL-VAULT Tile: 14"

**Profiles:**

PINE-CREST Shake

BARREL-VAULT Tile

PACIFIC Tile

**BATTEN  
Ridge Riser**

**Boral Steel Stone Coated Roofing**  
7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings  
are not to  
scale