Boral Steel® Architectural Details are divided into three (3) categories based on the install method used: BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel) **DIRECT** (Panel is exposed fastened & mounted Direct-to-the roof-deck) **GRANITE-RIDGE Shingle** (Panel is hidden fastened & mounted Direct-to-the roof-deck)

*Batten Fasteners omitted for clarity. See fastening drawings for panel and batten attachment.

Battens: to be nominal 2"x2" spruce pine

fir #2 or better.

Fastener number, spacing and size as per

fastener chart.

Install using appropriate Boral Steel "Batten

Spacers".

Panels: Cut panel to length to finish into **Boral Steel Z-Bar** the pan, tight to the wall. **Boral Steel Under** Pan: For use in limited clearance locations Roofing Underlayment: Turn up minimum of 3" at sidewall.

Profiles: PINE-CREST Shake **BARREL-VAULT Tile** PACIFIC Tile

> **BATTEN Side-Wall Underpan**

Boral Steel Stone Coated Roofing 7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Batten Spacing

PACIFIC Tile: 14 ¹/₄"

PINE-CREST Shake: 14 1/4"

BARREL-VAULT Tile: 14"

Drawings are not to scale