

Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

DIRECT (Panel is exposed fastened & mounted Direct-to-the roof-deck)

GRANITE-RIDGE Shingle (Panel is hidden fastened & mounted Direct-to-the roof-deck)

Architectural details provided for Boral Steel® customers only

***Batten Fasteners omitted for clarity.**

See fastening drawings for panel and batten attachment.

Battens: to be nominal 2"x2" spruce pine fir #2 or better fastened to counter battens. Fastener number, spacing and size as per fastener chart. Install using appropriate Boral Steel "Batten Spacers". **Spacing between first two battens will vary to insure panel layout.**

Panels: Install bottom panel to extend past fascia $\pm \frac{1}{2}$ ". Seal and chip screws at top surface of panel.

Roofing Underlayment: Wrap minimum 1" over finish edges.

Boral Steel Fascia: Install tight to structure.

Counter Battens: to be nominal 1"x4" spruce pine fir #2 or better fastened to truss structure. 24" O.C. Max. Fastener number, spacing and size as per fastener chart.

Batten Spacing

PINE-CREST Shake: 14 $\frac{1}{4}$ "

PACIFIC Tile: 14 $\frac{1}{4}$ "

BARREL-VAULT Tile: 14"

Profiles:

PINE-CREST Shake

BARREL-VAULT Tile

PACIFIC Tile

**BATTEN
Counter-Batten Eave Metal**

Boral Steel Stone Coated Roofing
7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings
are not to
scale