

Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

DIRECT (Panel is exposed fastened & mounted Direct-to-the roof-deck)


GRANITE-RIDGE Shingle (Panel is hidden fastened & mounted Direct-to-the roof-deck)

Architectural details provided for Boral Steel® customers only

***Batten Fasteners omitted for clarity.**

See fastening drawings for panel and batten attachment.

Battens: to be nominal 2"x2" spruce pine fir #2 or better fastened to counter battens. Fastener number, spacing and size as per fastener chart. Install using appropriate Boral Steel "Batten Spacers".

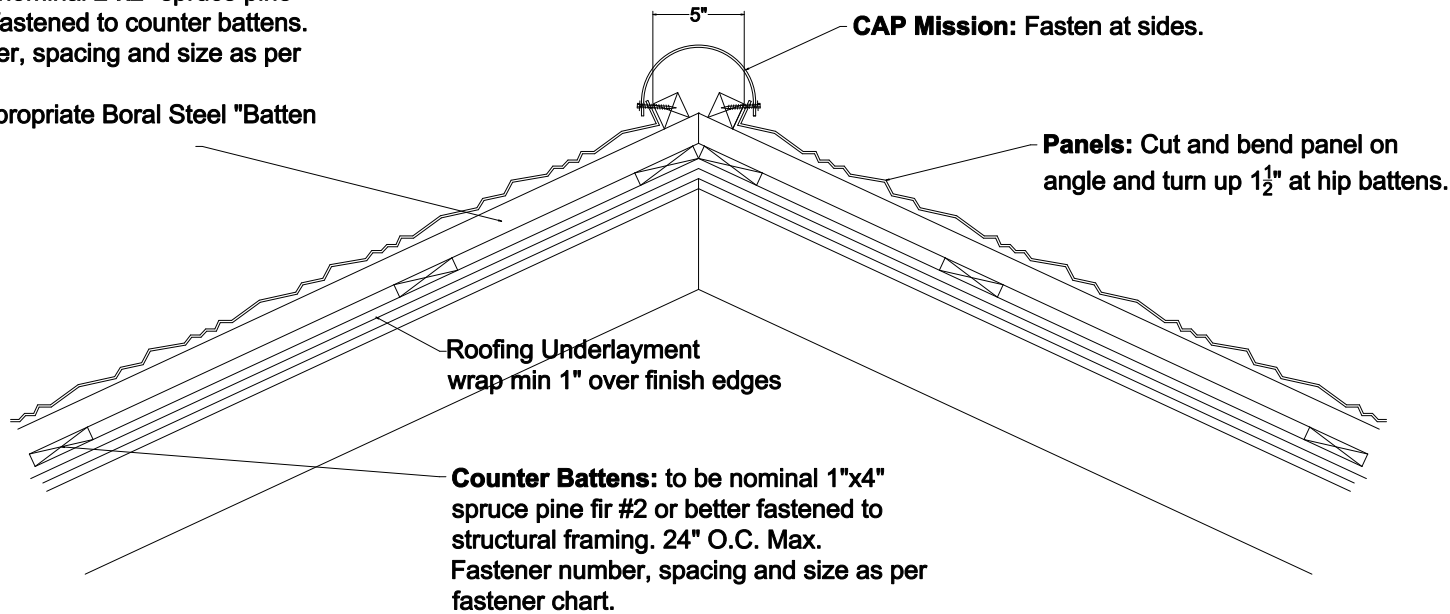


Roofing Underlayment wrap min 1" over finish edges

Counter Battens: to be nominal 1"x4" spruce pine fir #2 or better fastened to structural framing. 24" O.C. Max. Fastener number, spacing and size as per fastener chart.

CAP Mission: Fasten at sides.

Panels: Cut and bend panel on angle and turn up 1 1/2" at hip battens.

CAP Shake: Fasten at sides. (For use with PINE-CREST Shake)

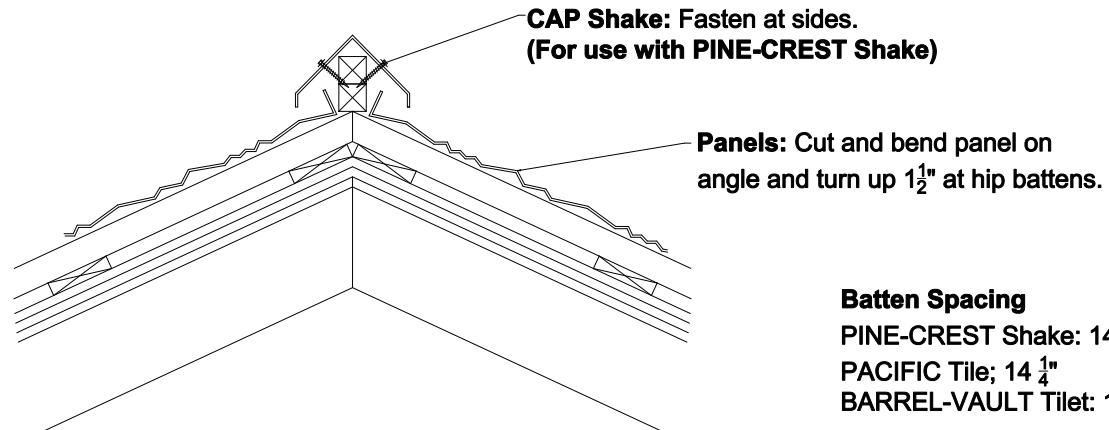

Panels: Cut and bend panel on angle and turn up 1 1/2" at hip battens.

Batten Spacing

PINE-CREST Shake: 14 1/4"

PACIFIC Tile; 14 1/4"

BARREL-VAULT Tile: 14"

Profiles:

PINE-CREST Shake

BARREL-VAULT Tile

PACIFIC Tile

**BATTEN
Counter-Batten Hip**

Boral Steel Stone Coated Roofing
7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings are not to scale