Boral Steel® Architectural Details are divided into three (3) categories based on the install method used:

BATTEN (Panel is exposed fastened & mounted onto a wood 2x2 batten or steel hat channel)

DIRECT (Panel is exposed fastened & mounted Direct-to-the roof-deck)

GRANITE-RIDGE Shingle (Panel is hidden fastened & mounted Direct-to-the roof-deck)

\*Batten Fasteners omitted for clarity.
See fastening drawings for panel and batten attachment.

**Battens:** to be nominal 2"x2" spruce pine fir #2 or better fastened to counter battens. Fastener number, spacing and size as per fastener chart.

Install using appropriate Boral Steel "Batten Spacers".

CAP Mission: Fasten at sides.

Panels: Cut and bend panel and turn up 1½" at rake batten.

Roofing Underlayment wrap minimum 1" over finish edges

Counter Battens: to be nominal 1"x4" spruce pine fir #2 or better fastened to structural framing. 24" O.C. Max.
Fastener number, spacing and size as per fastener chart.

## **Batten Spacing**

PINE-CREST Shake: 14 1/4"

PACIFIC Tile: 14 <sup>1</sup>/<sub>4</sub>"

**BARREL-VAULT Tile: 14"** 

CAP Shake: Fasten at sides into 2"x2"

batten.

Panels: Cut and bend panel and turn up 1½" at rake batten.

Roofing Underlayment wrap minimum 1" over finish edges

Profiles:
PINE-CREST Shake
BARREL-VAULT Tile
PACIFIC Tile

## BATTEN Counter Batten Rake-Gable CAP Mission and Shake

## Boral Steel Stone Coated Roofing 7575 Irvine Ctr Dr Suite 100, Irvine, CA 92618

Drawings are not to scale