



ITEM	LEGEND
A1	VACUUM BREAKER, NO CONNECTION
	STEAM, CUSTOMER MUST SUPPLY AIR STRAINER.
A2	1/4"NPT AIR INLET, ONLY WITH OPTIONAL AIR-OPERATED
B1	COIN ACCEPTOR, MCR36E4 ONLY
D1	DRAIN 3" ID HOSE CONNECTION
E1	MAIN ELECTRICAL CONNECTION
F1	FOUNDATION BASE PADS
	MINIMUM
F2	(8) 7/8" ANCHOR BOLT HOLES, USE 3/4" X 6" BOLTS
L1	SOAP CHUTE
	MWR36E4 (3 PORTS), MWR36J4 (5 PORTS)
L2	PERISTALTIC CHEMICAL INLETS: MCR36E4 (0 PORTS),
	REQUIRES AIR (A2)
	REMOVED FOR SHIPPING MUST BE ADDED AT INSTALLATION
S1	OPTIONAL AIR-OPERATED STEAM INLET 1/2"NPT, Y-STRAINE
W1	COLD WATER INLET, 3/4" GARDEN HOSE
W2	HOT WATER INLET, 3/4" GARDEN HOSE
	CONNECTION WITH 1/2" HOSE
W3	HOT WATER FOR SOAP CHUTE INLET, 3/4" GARDEN HOSE

- NOTES

 7 SHIM TO LEVEL THE MACHINE AND ALLOW FOR 1" [25] MINIMUM GROUT. ANCHOR ALL (8) ANCHOR BOLT HOLES, OR THE WARRANTY WILL BE DECLARED INVALID. USE 3/6" X 6" BOLTS, MINIMUM. SEE INSTALLATION MAINTENANCE MANUAL FOR FURTHER INSTRUCTIONS.

 5 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO NAY OBJECT IS:

 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.

 42 [1067] IF OBJECT IS ANY LIVE PART.
 CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEST WHEN ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEST WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT, ON TRAVERSING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE FINENDE OF THE THE WORLD OF THE MORE AND THE MOST OF THE
- THICK GROUT BED.

 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.

 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR REDICATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE, FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

MOST REGULATORY AUTHORITIES (INCLUDING SOR OPENINGS).

ATTENTION.

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESECABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEW HOM MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FRONCS, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ANUTACTURER OR VENDOR.

ATTENTION

HE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT
TREQUENCY THEREOP) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE
VICUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCE
SENERATED DURING ITS OPERATION. WITHE THE FACTORY FOR ADDITIONAL MACHINE
MATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

MCR36E4, MWR36J4



BDMWR36J4AE 2020094D

PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467–9591,
FAX 504/468–3094, Email: milnorinfo@milnor.com