


TABLE 1			
PART NUMBER	SPEED (FT/MIN [M/SEC])	SET CAPACITY (LBS [KG])	HOIST WEIGHT (LBS [KG])
018-T0224	20 [0.1]	2400 [1089]	1630 [740]
018-T0233	20 [0-0.1]	3300 [1497]	1830 [831]
018-T2022	0-200 [0-1.0]	2200 [998]	1630 [740]
018-T2030	0-200 [0-1.0]	3000 [1361]	1830 [831]
018-T2633	0-260 [0-1.3]	3300 [1497]	1870 [849]
018-T3413	0-340 [0-1.7]	1300 [590]	1630 [740]
018-T3417	0-340 [0-1.7]	1750 [794]	1640 [744]
018-T4022	0-400 [0-2.0]	2200 [998]	1740 [790]
018-T6514	0-650 [0-3.3]	1400 [635]	1670 [758]

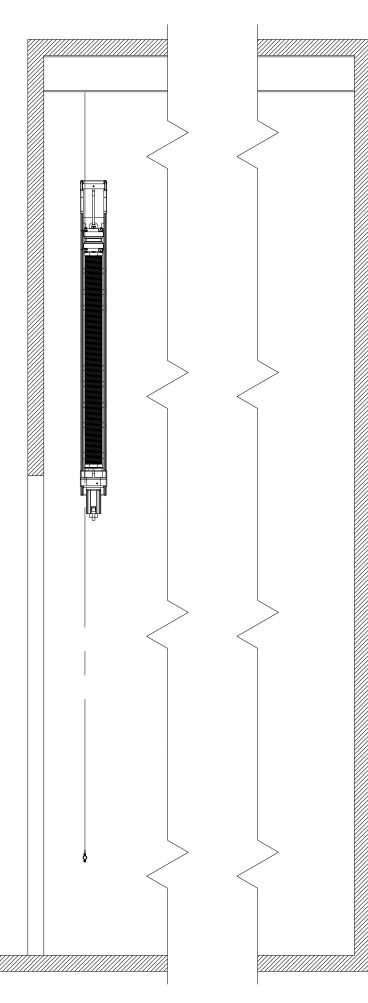



NOTES:

- 1. CONTROL CABINET REQUIRED. CAN BE MOUNTED ON HOIST OR REMOTELY.
- 2. SLACK LINE DETECTION ON ALL HOIST MODELS.

<u>OPTIONS</u>:

- 1. 8 LINE OR 10 LINE
- 2. LOAD SENSING
- 3. INCREMENTAL ENCODER, ABSOLUTE ENCODER, OR NO ENCODER
- 4. CUSTOM SOLUTIONS AVAILABLE. PLEASE CONTACT A JR CLANCY REPRESENTATIVE FOR MORE INFORMATION.

