## **Power Coupler**

If the system does not require a permanent Network Control Panel, use the Power Coupler (PC) to connect the Power Supply output to the cable running to the first Primary Hub.

