



1. REMOVE BEAD & MOULDING FROM "M" SECTION

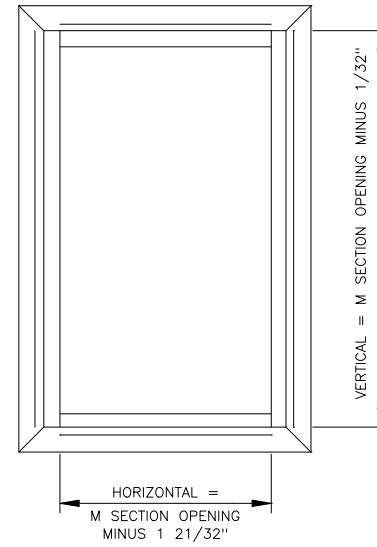

2. CUT PART #9457-00 & #9458-00 TO SUIT "M" SECTION OPENINGS. SQUARE ENDS.

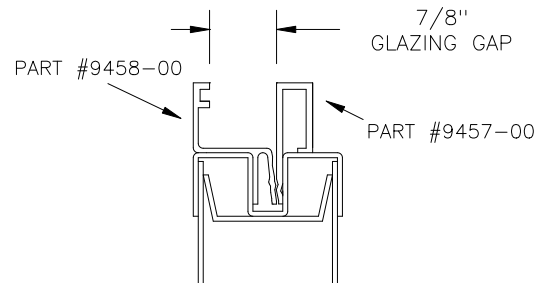

3. INSTALL PART #9458-00 INTO "M" SECTION ALL FOUR SIDES. SNAP GLAZING BEAD PART #9457-00 INTO SPACE BETWEEN #9458-00 & "M" SECTION.