






#322 Drip Cap

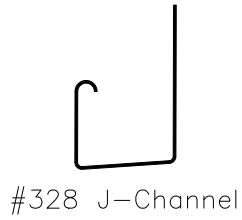


#328 J-Channel

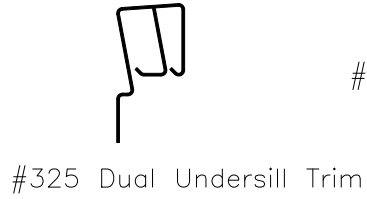


#325 Dual Undersill Trim

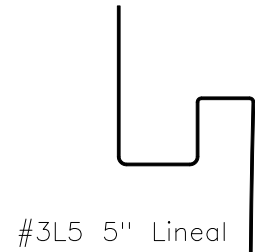


#3L5 5" Lineal

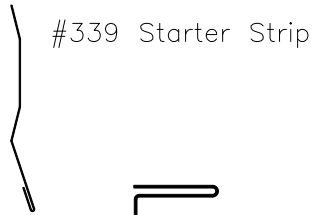


#339 Starter Strip

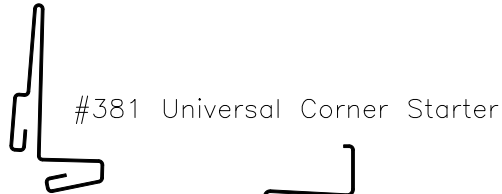

#381 Universal Corner Starter




#3A4 New Construction Window & Door Starter

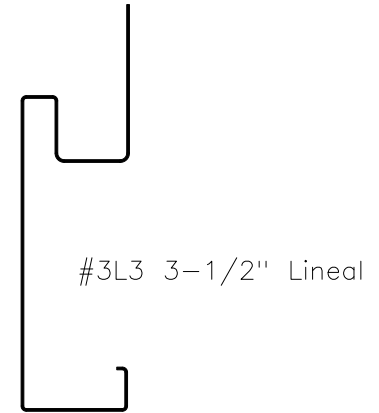


#3L3 3-1/2" Lineal




#321 F-Channel

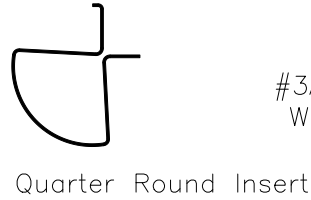


#3LQ Quarter Round Insert

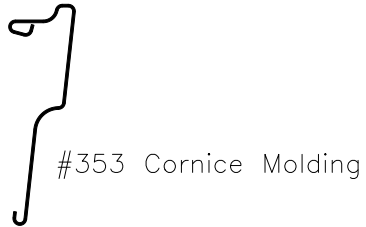

#353 Cornice Molding

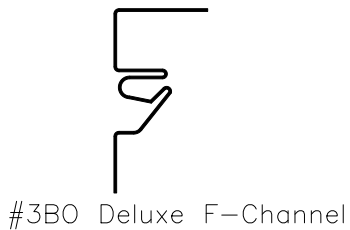

#3B0 Deluxe F-Channel

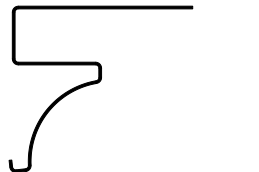

#346 Soffit Cove Trim



#3E8 Crown Molding

Make sure all surfaces are properly prepared and/or flashed.

IMPORTANT: This drawing is not intended to serve as a substitute for installation instructions set forth in the CertainTeed installation manual. Always consult the installation manual for complete instructions.

Copyright 2000 CertainTeed Corporation