


Silicone rolling tool.

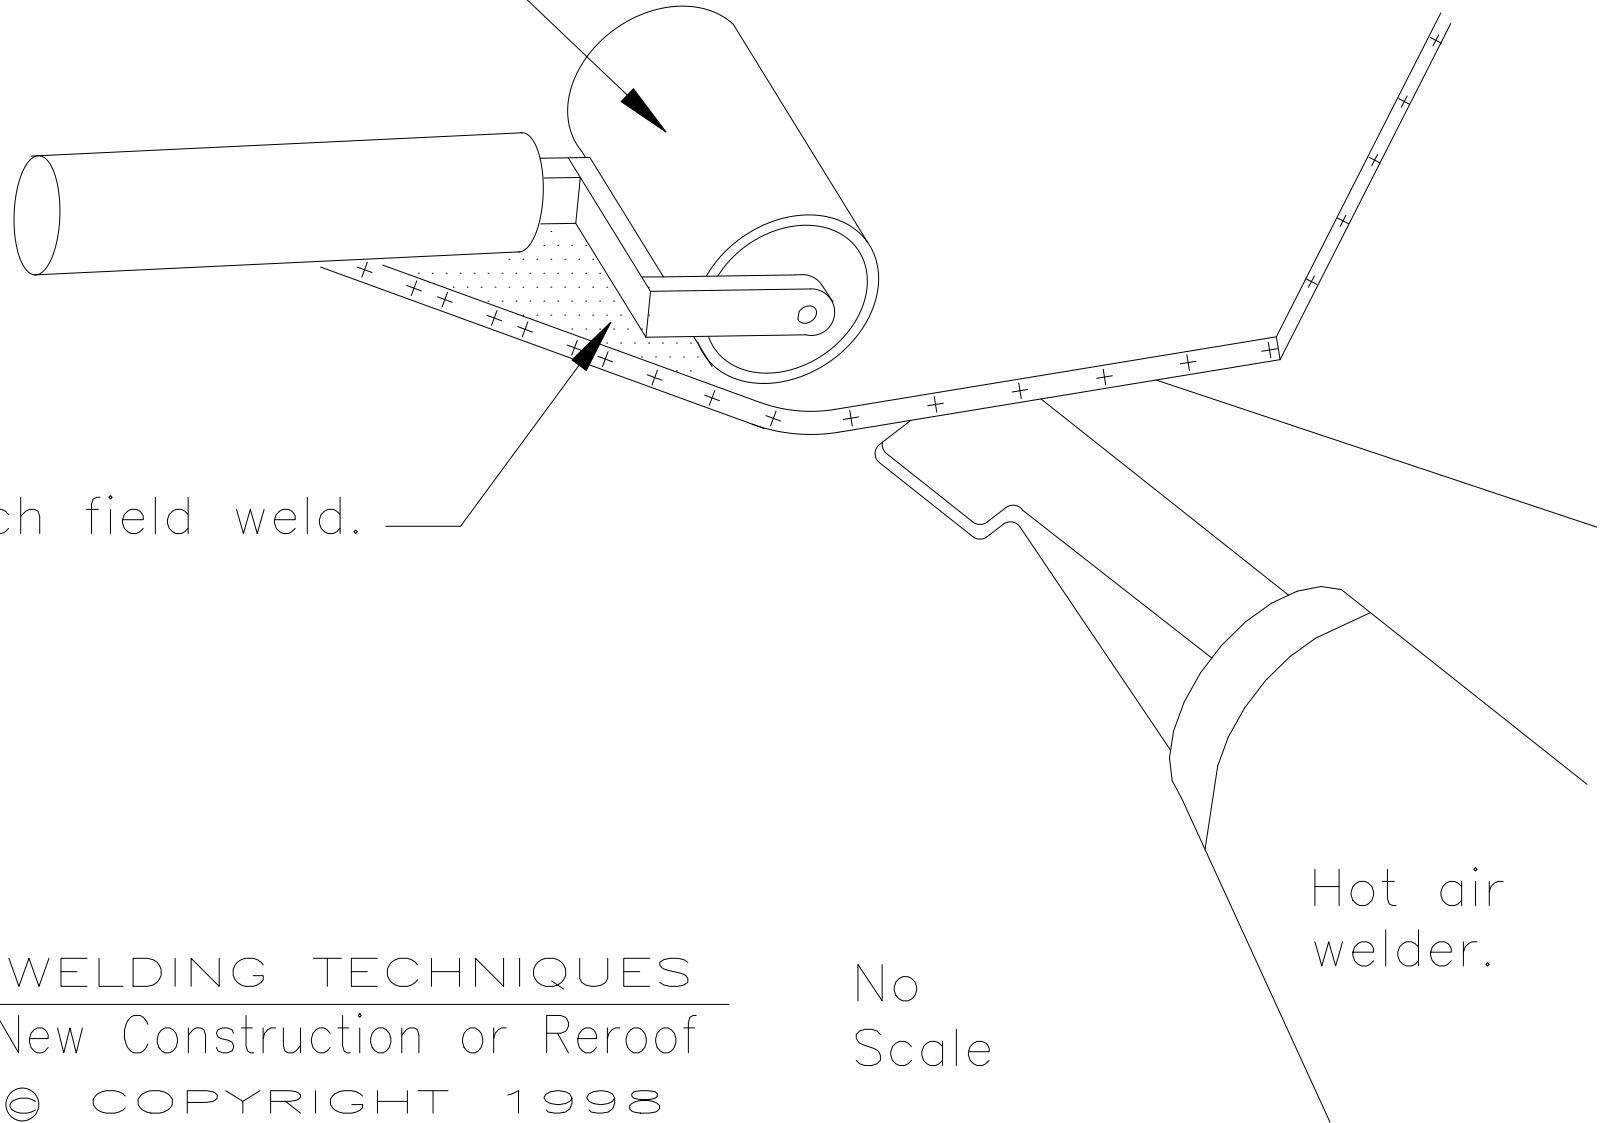

Note: After all field heat welds, a hand and knee inspection shall be made of the seams with a tack claw.