



Fill between flutes with urethane foam to level with top of flutes.

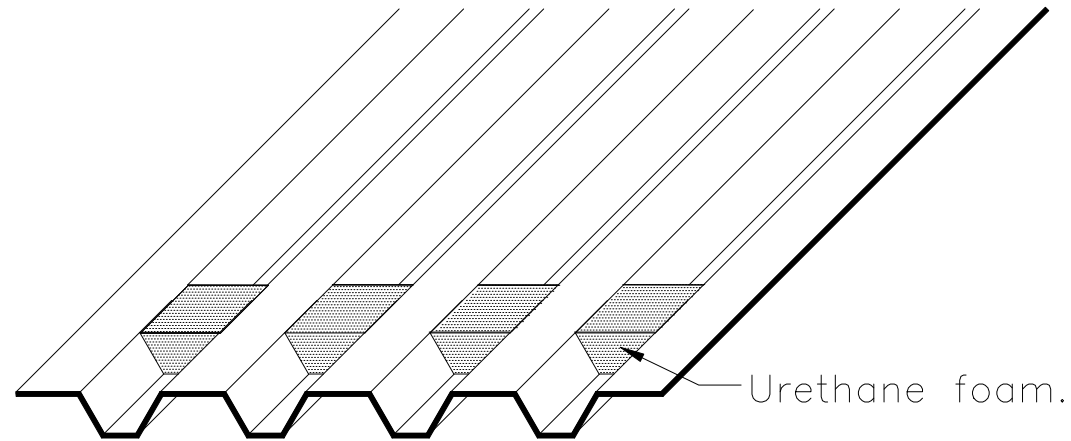

Drill 1/4-inch dia. holes in bottom of flute on existing roof side of tie-in only when they will be covering with roofing material.

Apply sealant to underside of material and fasten Duro-Last termination bar over urethane foam.

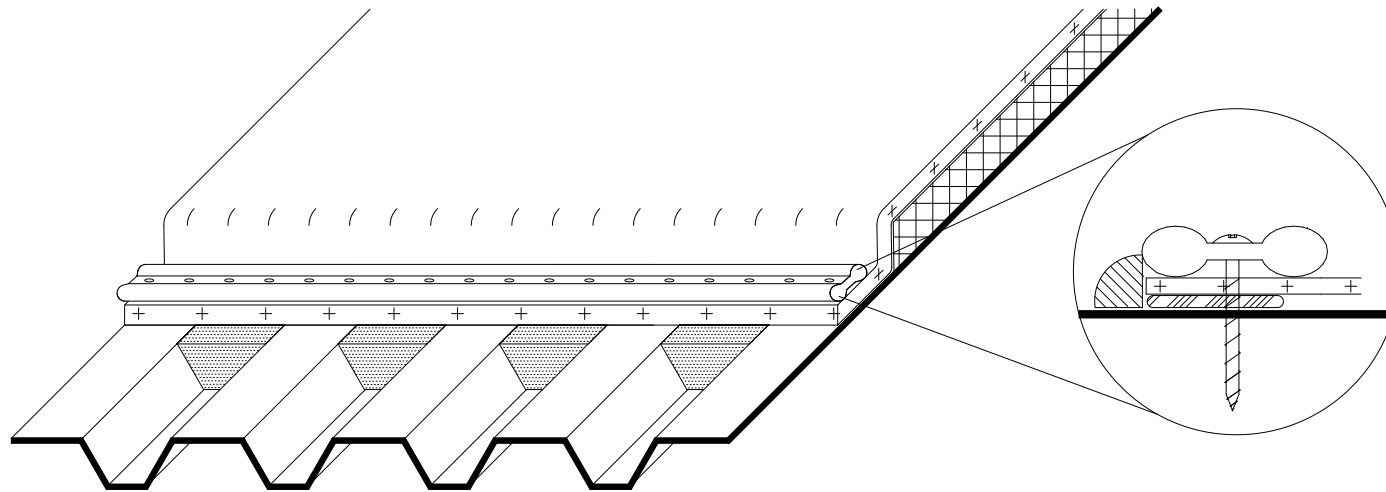

Note: See other details for completion of tie-in.