




2 TENDON SPACING

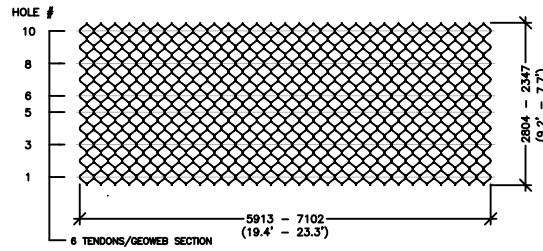


6 TENDON SPACING

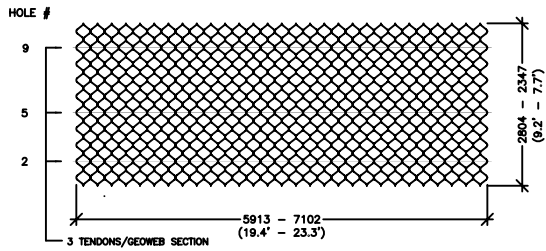


3 TENDON SPACING

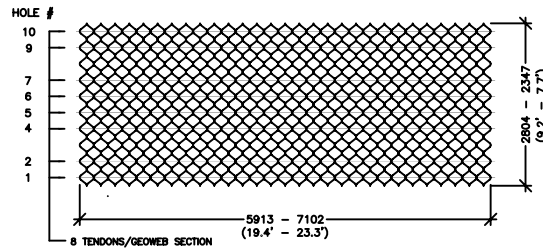


8 TENDON SPACING

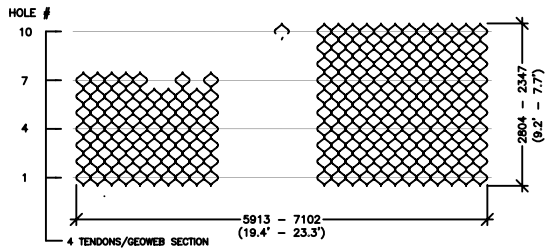


4 TENDON SPACING

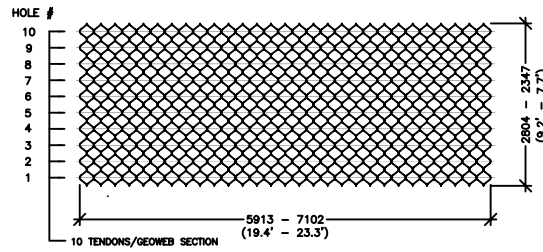


10 TENDON SPACING

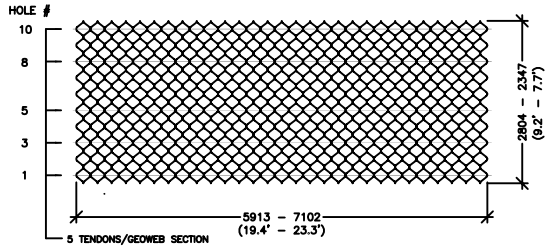

5 TENDON SPACING

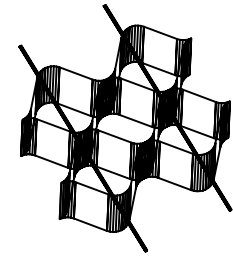

TYPICAL TENDON DETAIL

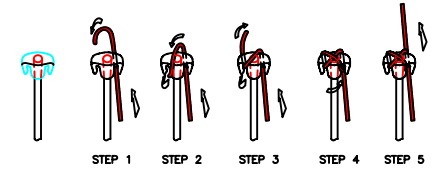

- THE MOORE HITCH WITH THE ATRA® ANCHOR
- STEP 1 PLACE THE TENDON UNDER ONE ARM OF THE ATRA® CLIP.
 - STEP 2 DIAGONALLY CROSS THE TENDON OVER THE TOP OF THE ATRA® CLIP.
 - STEP 3 PLACE THE TENDON UNDER THE OTHER ARM AND PULL TAUGHT TO REMOVE ANY SLACK.
 - STEP 4 DIAGONALLY CROSS THE TENDON BACK OVER THE TOP OF THE ATRA® CLIP AND PLACE THE TENDON UNDER THE FIRST ARM.
 - STEP 5 PULL THE TENDON TAUGHT TO REMOVE ANY SLACK. REPEAT THIS PROCESS IF THE TENDON SLIPS AROUND THE ATRA® CLIP.

MOORE HITCH DETAIL

ALL DIMENSIONS IN mm (U.S. UNITS IN BRACKETS)

PRESTO GEOSYSTEMS®

THE GEOWEB®
CELLULAR CONFINEMENT SYSTEM
TENDON HOLE SPACING
GW20V GEOWEB® SECTIONS

GEOSYSTEMS®, GEOWEB®, AND ATRA® ARE REGISTERED TRADEMARKS OF PRESTO PRODUCTS COMPANY.

DATE	APRIL, 2008	FILE NAME	GWGEN7F.DWG
SCALE	NTS	SHEET	7

