


VINYL FLOORING FOR THE ELEMENTS




Tuff Industries
1939 Kirschner Rd., Kelowna, B.C.
Toll Free: 1-877-860-9333
Fax: (250) 860-9337
www.tufdek.com

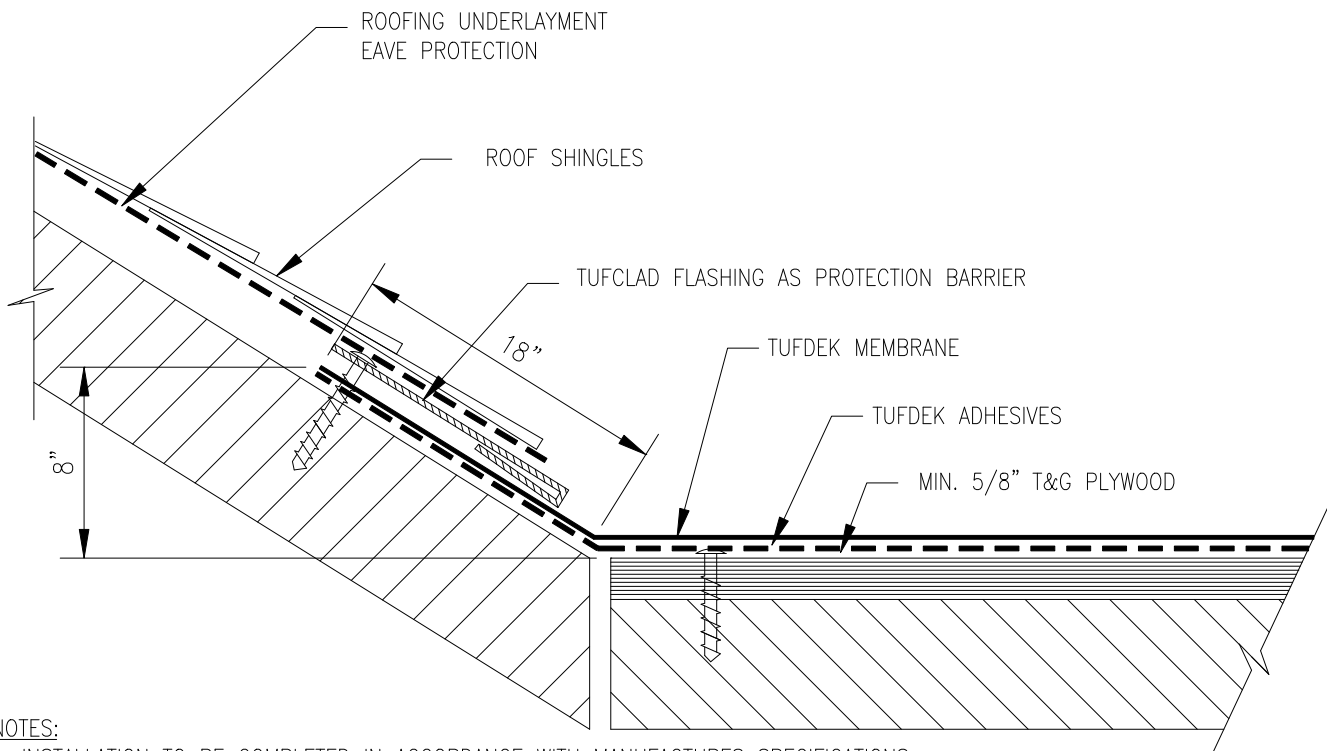

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURES SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. MIN. SLOPE 1/4":12" AWAY FROM STRUCTURE.
4. TUFDECK MEMBRANE TO BE FULLY ADHERED ON ALL VERTICAL SURFACES WITH TUFF # ADHESIVE.
5. PLYWOOD SUBSTRATES TO BE MIN. 5/8" T&G (3/4" RECOMMENDED) PLYWOOD JOINTS TO BE BLOCKED FROM BELOW.
6. AS A SUPPLIER OF MATERIALS ONLY, TUFF INDUSTRIES DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING, QUANTITIES OR DIMENSIONS. THE ARCHITECT, CONTRACTORS OR OWNERS REPRESENTATIVE MUST VERIFY ALL DIMENSIONS, SIZES AND SUITABILITY OF DETAILS.
7. TUFDEK MUST EXTEND UP THE SLOPE A MIN. 18" AND AT LEAST 8" ABOVE THE HIGHEST POINT OF THE INBOARD OR BUILT IN GUTTER.
8. THIS DRAWING IS THE PROPERTY OF TUFF INDUSTRIES INC. AND MAY NOT BE REPRODUCED WITHOUT WRITTEN CONSENT. ANY DIMENSIONS ARE APPROXIMATE AND ARE SUBJECT TO FIELD CONFIRMATION BY OTHERS.
9. CONTRACTORS NOTE: FOR PRODUCT INFORMATION VISIT: www.tufdek.com



TD-10

MEMBRANE TIE-IN TO SHINGLE ROOF SYSTEM