



FRONT ELEVATION

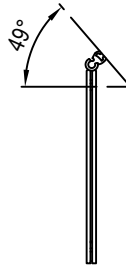

SIDE ELEVATION

SLOPED CEILING MOUNTED

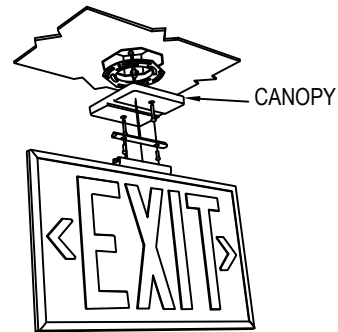

ISOMETRIC VIEW
RETROFIT INSTALLATION

RETROFIT CANOPY ADAPTER

ECOGLO'S ACCESSORY COVER PLATE GIVES YOU ALL THE BENEFITS OF LOW COST INSTALLATION AND MAINTENANCE WITHOUT THE FRUSTRATIONS THAT OTHER SYSTEMS HAVE. NO SPECIAL TOOLS ARE REQUIRED.


SIMPLY ATTACH UNIVERSAL MOUNTING BRACKET TO AN EXISTING OCTAGON BOX, FASTEN THE ECOGLO CANOPY TO THE MOUNTING BRACKET AS SHOWN IN THE DIAGRAM. SLIDE THE SIGN INTO THE CANOPY INSTEAD OF SCREWING IT DIRECTLY INTO A CEILING OR WALL. WHEN REPLACING OR REMOVING AN ELECTRICALLY-POWERED EXIT THE POWER MUST BE TERMINATED AT THE SOURCE NOT IN THE WALL CAVITY BEFORE INSTALLING THE ECOGLO EXIT SIGN. CHECK WITH THE LOCAL ELECTRICAL CODE REQUIREMENTS FIRST BEFORE INSTALLATION

SLOPED CEILING ADAPTOR

THE HINGED MOUNTING ADAPTER ACCOMMODATES SLOPES FROM 0 TO APPROXIMATELY 49 DEGREES AND IS INSTALLED SIMILAR TO THE STANDARD CEILING CONFIGURATION

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 4776-030A

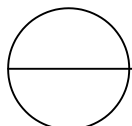

UL 924 LUMINOUS EXIT SIGNS

EXIT SIGN: RETROFIT CANOPY ADAPTOR & SLOPED CEILING ADAPTOR