




Schematic sketches Cast-in-place

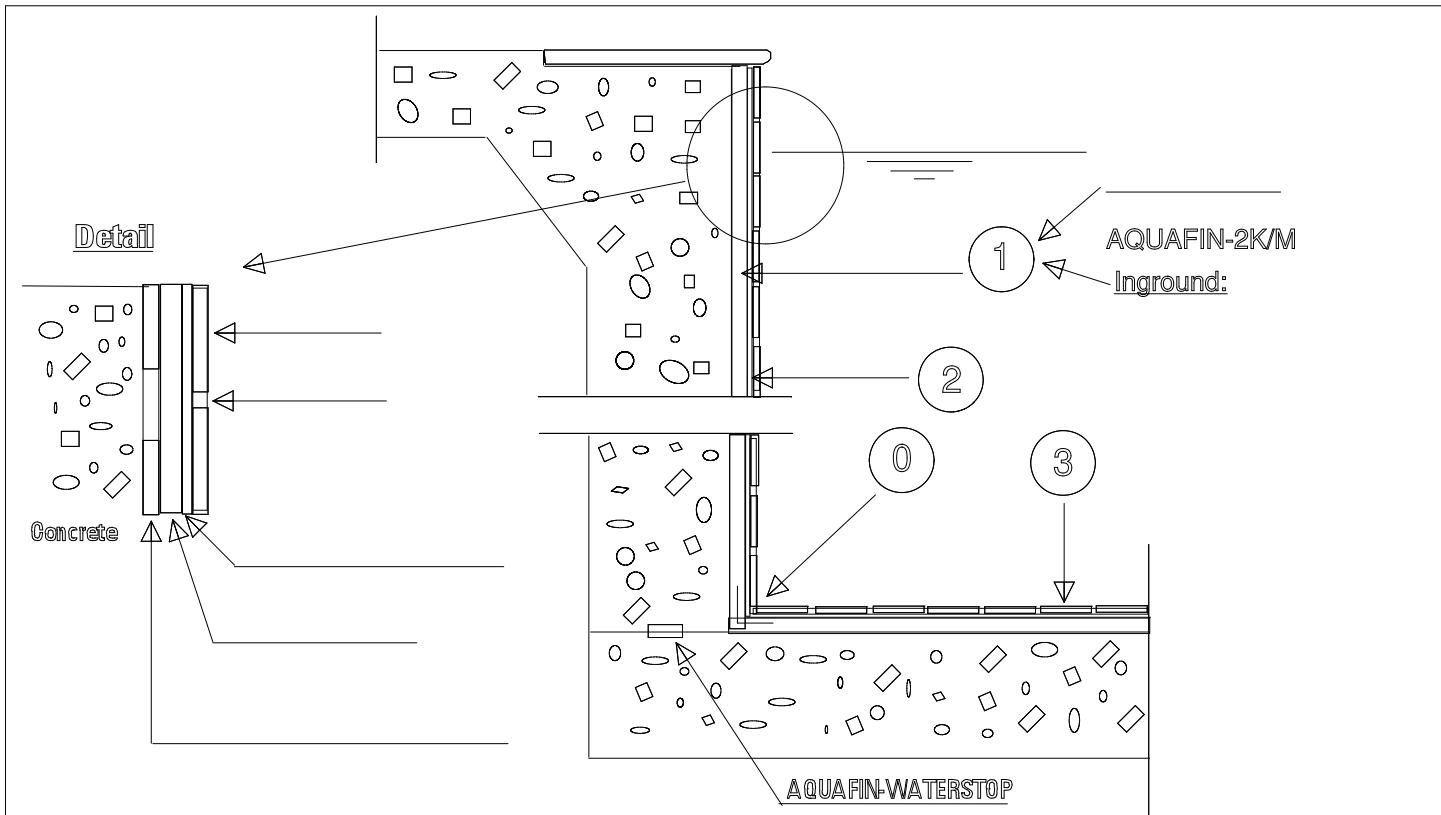

Substrate: Cast-in-place concrete or gunite (shotcrete)

Note: Install leveling coats (i.e. "mud bed", "brown coat", plaster, etc.) to the concrete substrate, prior to the appli-

SEALING TAPE-2000-S to seal expansion joints. Refer to No. 1.1.3-15 for details.

① Above ground + elevated:

-ground:
o

gutters. See application rates on AQUAFIN-2K/M data sheet.

②

Install ceramic or glass tiles and tile grout. Observe TCNA Guidelines for movement joint spacing.

Refer to standard specifications and product data sheet for further information.