



# FLEXIBLE FAST ADHESIVE FLEECEBACK ATTACHMENT

## NOTES:

1. REFER TO CARLISLE SPECIFICATIONS FOR PRODUCT DATA SHEETS FOR APPROPRIATE BEAD SPACING BASED UPON THE BUILDING HEIGHT, WARRANTY TERM AND ACCEPTABLE SUBSTRATE.
2. THE SURFACE TO WHICH ADHESIVE IS TO BE APPLIED SHALL BE DRY, FREE OF FINES, PROTRUSIONS, SHARP EDGES, LOOSE AND FOREIGN MATERIALS, OIL AND GREASE. AREA SHOULD BE CLEANED WITH AN AIR BLOWER.
3. PREVIOUSLY UNEXPOSED ASPHALT OR RESIDUE MUST BE PRIMED WITH CARLISLE CAVGRIP III, 702 OR 702LV PRIMER.
4. SEAL ALL GAPS IN THE CONCRETE DECK WITH CARLISLE 725TR OR OTHER SUITABLE MATERIAL TO AVOID CONDENSATION ISSUES OR FILL WITH CARLISLE INSULATION ADHESIVE.
5. UNROLL 10' TO 15' OF MEMBRANE TO ENSURE IT IS PROPERLY ALIGNED AND FOLD UNROLLED SECTION BACK OVER ROLL.
6. APPLY FLEXIBLE FAST ADHESIVE OVER THE SUBSTRATE AREA TO BE COVERED BY THE MEMBRANE THAT IS FOLDED BACK.
7. ONCE THE FLEXIBLE FAST ADHESIVE IS APPLIED IN PLACE AND HAS BEGUN TO RISE APPROXIMATELY  $\frac{1}{8}$ " IN HEIGHT AND DEVELOP STRINGS WHEN TOUCHED WITH A HP SPLICE WIPE, SLIDE THE MEMBRANE INTO THE ADHESIVE.
8. ROLL THE MEMBRANE USING A 30" WIDE, 150 POUND WEIGHTED SEGMENTED STEEL ROLLER, TO SET THE MEMBRANE BACK INTO THE ADHESIVE.

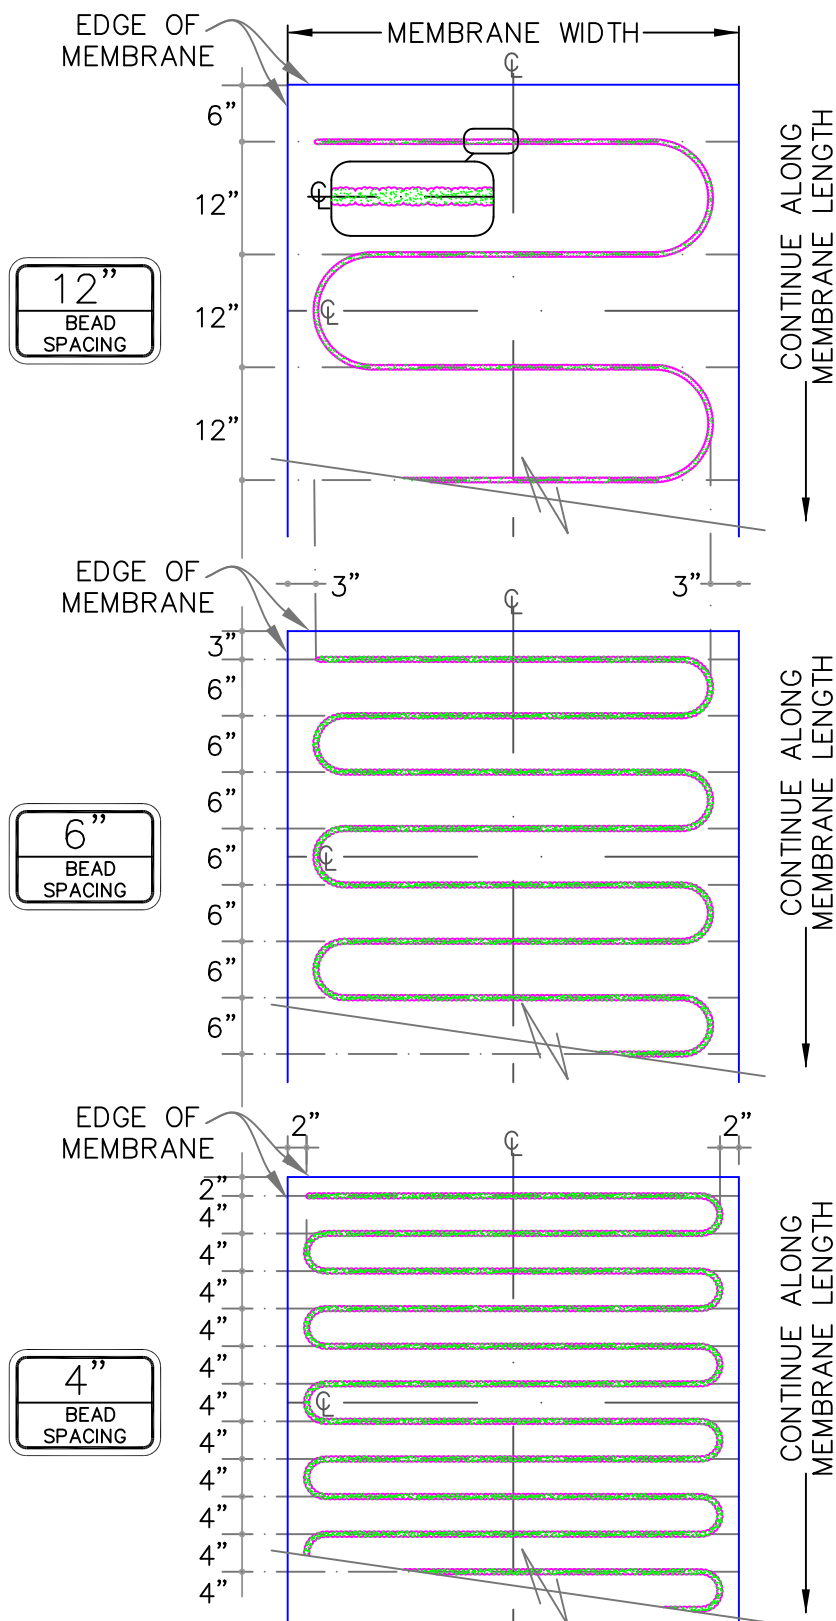

FEET TO CENTIIMETERS		INCHES TO CENTIMETERS																				
4'	8'	inch	1/8"	1/4"	15/32"	1/2"	5/8"	3/4"	1"	1.5"	2"	2.5"	3"	4"	6"	8"	9"	11"	12"	18"	24"	36"
120	250	cm	0.5	1	1.2	1.5	1.6	2	2.5	4	5	6.5	7.5	10	15	20	23	28	30	46	61	91

<div><div></div><div></div><div></div></div> <div><div>CENTER LINE</div><div>GUIDE LINE</div><div>FOAM ADHESIVE</div></div>	<div>FLEECEBACK MEMBRANE ATTACHMENT USING BEAD ADHESIVE</div> <div>For additional information, refer to Specifications</div>	<div></div>	<div>DETAIL NO.</div> <div>FB-27</div> <div>ADHERED SYSTEM</div>
--	--	--	--