


- 2. FLEECE-BACKING MUST BE REMOVED FROM THE MEMBRANE SO THAT WATER CUT-OFF MASTIC IS IN DIRECT CONTACT.
- 3. THE HOLE IN THE MEMBRANE SHALL EXCEED THE DIAMETER OF THE DRAIN PIPE, BUT SHALL BE NO LESS THAN 1/2" (1.5cm) FROM THE ATTACHMENT POINTS OF THE DRAIN CLAMPING RING.
- 4. ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE CONSTANT COMPRESSION ON WATER CUT-OFF MASTIC.
- 5. ROOF DRAIN SIZE AND NUMBER OF DRAINS SHALL BE IN ACCORDANCE WITH THE LOCAL CODES.

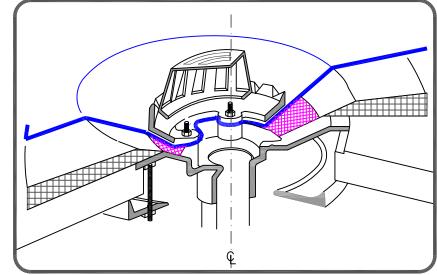

→ FleeceBACK MEMBRANE → FLEX FAST/AQUABASE → APPROVED SUBSTRATE	ROOF DRAIN WITH CONTINUOUS MEMBRANE	FB-6A.1
O —→SEE NOTE(S)	MAXIMUM WARRANTY: 30 YEARS	FLEECEBACK ADHERED