


NOTES:

1. WHEN MECHANICAL FASTENERS ARE USED TO PENETRATE THE METAL COUNTER-FLASHING, USE EPDM WASHERS, APPLY WATER CUT-OFF MASTIC UNDER THE COUNTER-FLASHING OR CAULK THE FASTENER HEADS.
2. SEAM PLATES AND FASTENERS MAY BE INSTALLED INTO THE VERTICAL SUBSTRATE.
3. HP FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED FOR MECHANICALLY FASTENED SYSTEMS OVER STEEL DECKS.
4. IF THE VERTICAL SPLICE ON THE CURB FLASHING IS NOT LOCATED AT THE CORNER, USE DETAIL [U-2C](#) FOR EPDM MEMBRANE SPLICES AT ANGLE CHANGES.

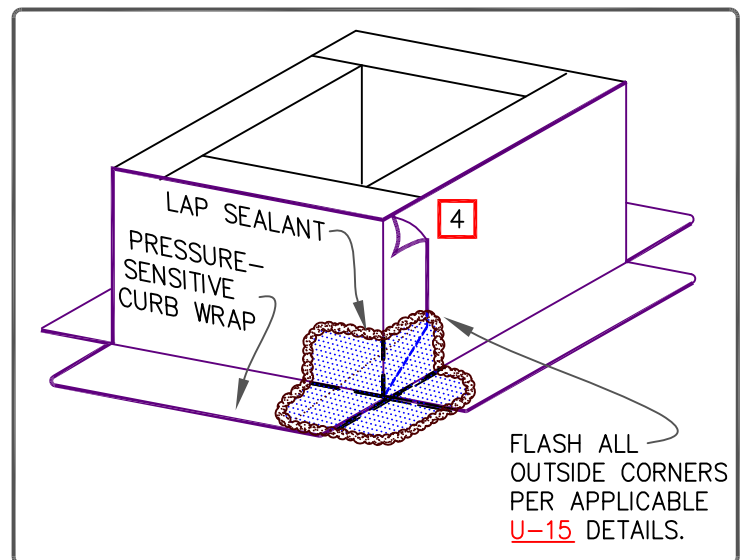

CURB FLASHING –
PRESSURE-SENSITIVE CURB WRAP
WITH 6" TAPE

MAXIMUM WARRANTY: 30 YEARS



DETAIL NO.

U-5B

THERMOSET UNIVERSAL