


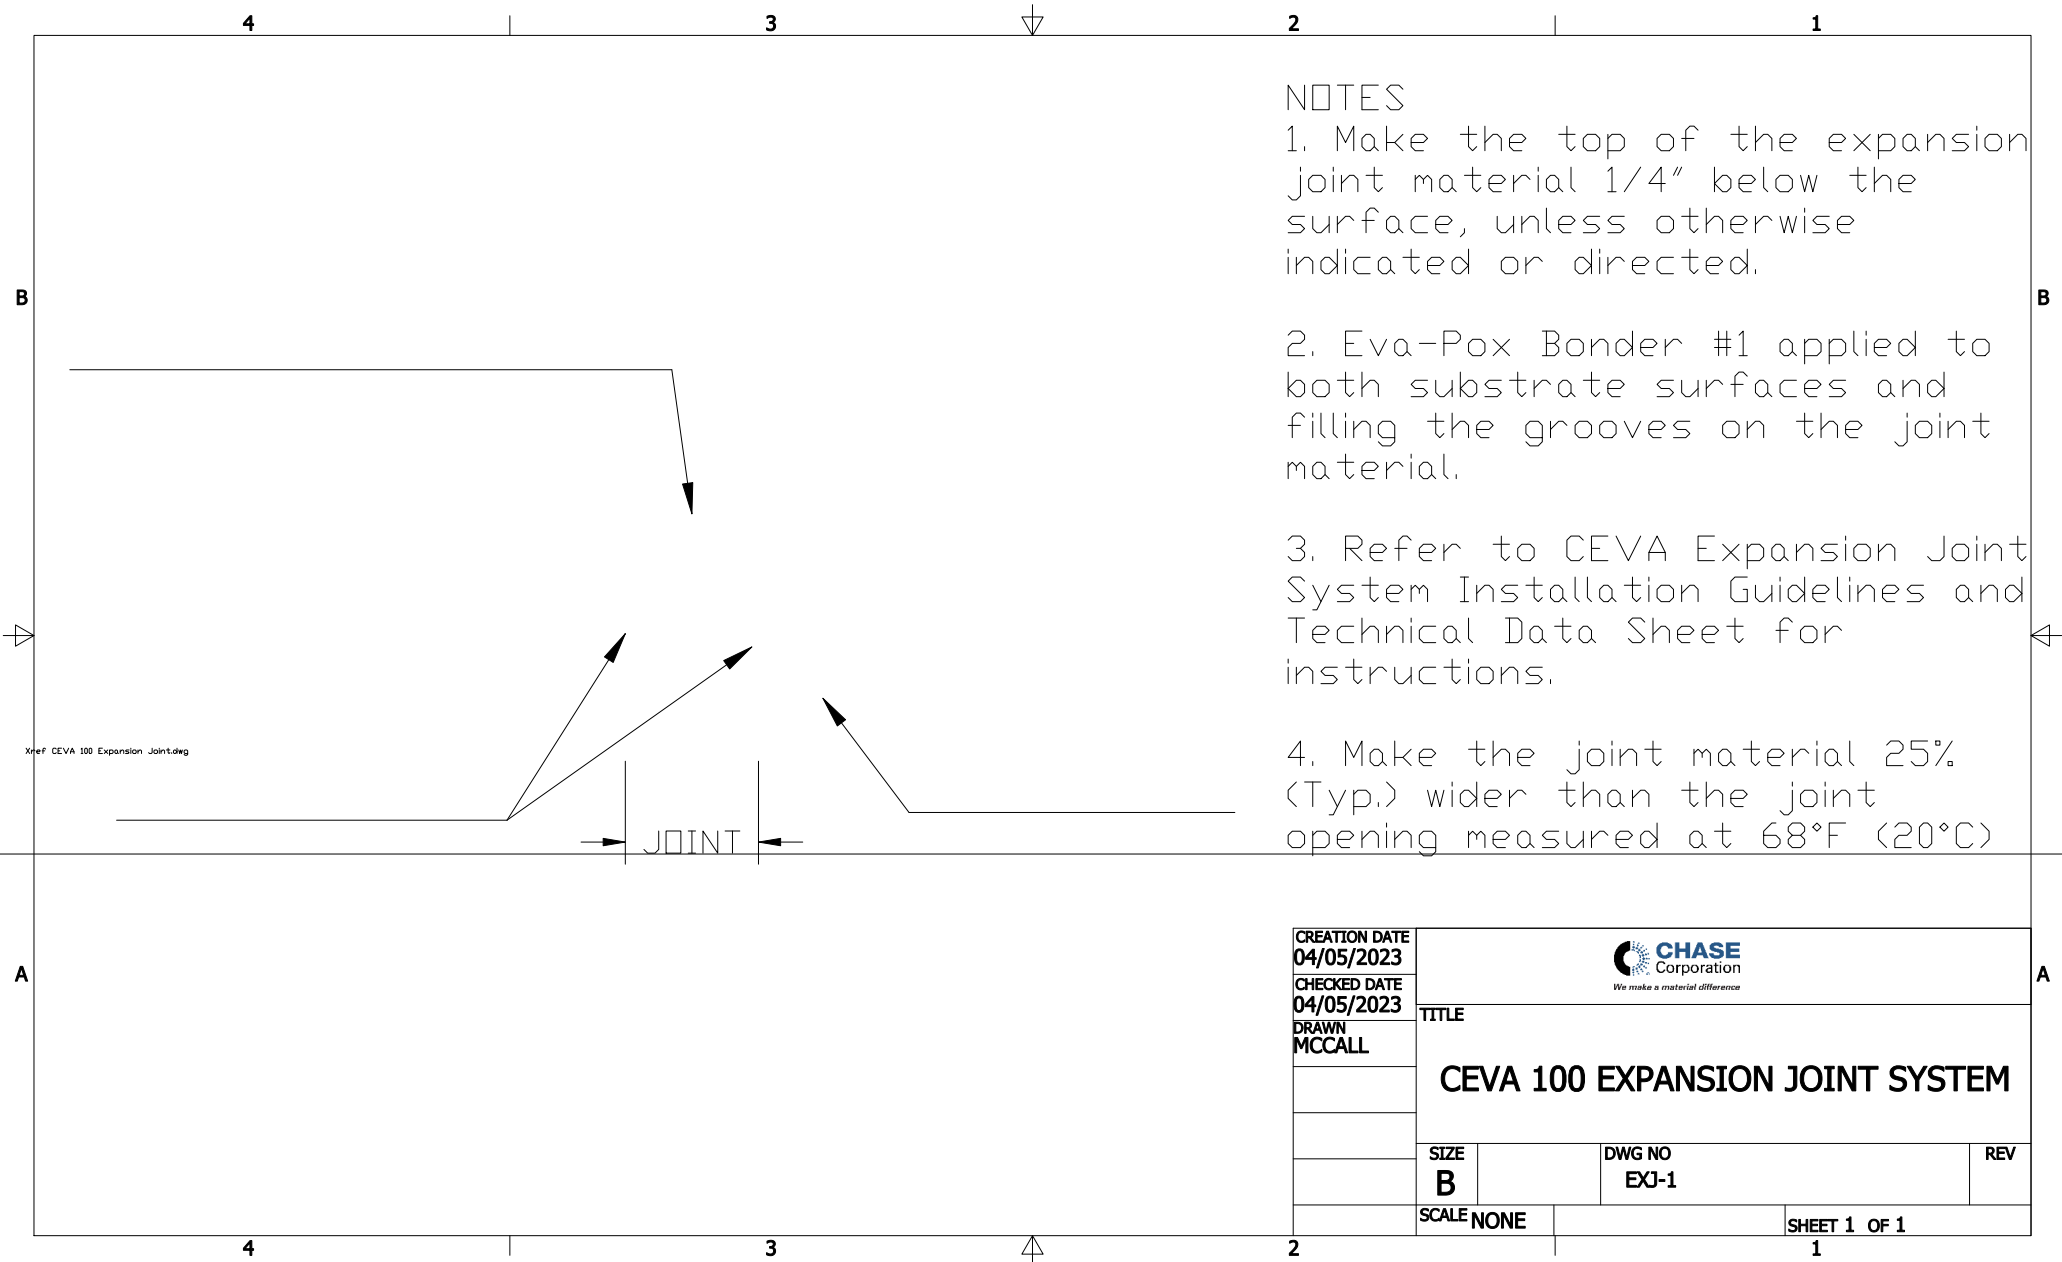

NOTES

1. Make the top of the expansion joint material 1/4" below the surface, unless otherwise indicated or directed.

2. Eva-Pox Bonder #1 applied to both substrate surfaces and filling the grooves on the joint material.

3. Refer to CEVA Expansion Joint System Installation Guidelines and Technical Data Sheet for instructions.

4. Make the joint material 25% (Typ.) wider than the joint opening measured at 68°F (20°C)

CREATION DATE 04/05/2023	 CHASE Corporation We make a material difference		
CHECKED DATE 04/05/2023			
DRAWN MCCALL	TITLE CEVA 100 EXPANSION JOINT SYSTEM		
	SIZE B	DWG NO EXJ-1	REV
	SCALE NONE	SHEET 1 OF 1	