



# PIPE CLUSTER GRIFFOLYN REPAIR

STEP 1  
VAPOR RETARDER WILL BE CUT  
AROUND CLUSTER TO ALLOW PIPES  
TO PASS THROUGH LINER

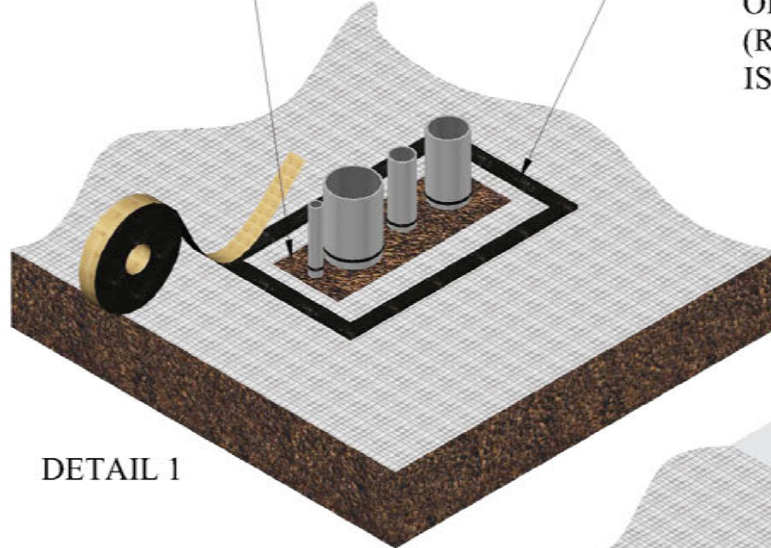

DETAIL 1

STEP 2  
DOUBLE SIDED BONDING/FAB TAPE WILL  
BE APPLIED AROUND ENTIRE PERIMETER  
OF PIPE CLUSTER  
(REMOVE RELEASE PAPER WHEN MATERIAL  
IS READY TO BE APPLIED)

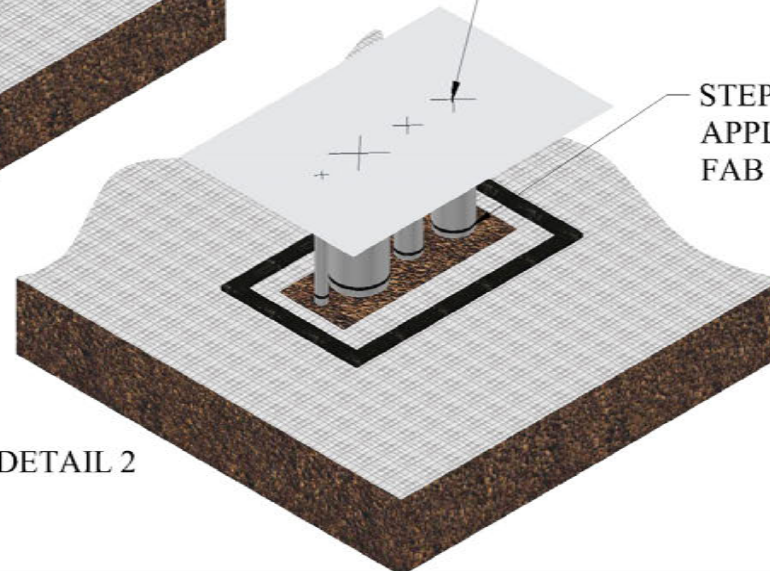

DETAIL 2

"X" REPRESENTS A SLIT  
ON THE PATCH MATERIAL  
("X" WILL BE SMALLER  
THAN DIAMETER OF PIPE)

STEP 3  
APPLY DOUBLE SIDED BONDING/  
FAB TAPE AROUND BASE OF PIPE