


Notes:

1. THE GEOWEB CELLS SHALL BE FILLED WITH THE SPECIFIED MATERIAL (TOPSOIL, STONE, OR CONCRETE) AND SHALL BE SUITABLE TO WITHSTAND THE APPLICABLE HYDRAULIC CONDITIONS.
2. IF FULL SURFACE VEGETATION IS DESIRED, PROVIDE AN EROSION CONTROL BLANKET, HYDROSEED, OR A TURF REINFORCEMENT MAT IF THERE IS A POTENTIAL FOR EROSION PRIOR TO ESTABLISHING VEGETATION.
3. THE GEOWEB SECTIONS SHALL BE ANCHORED AT THE CREST TO RESIST SLIDING DUE TO DRIVING AND HYDRAULIC FORCES.
4. THE GEOWEB PANELS SHALL BE CONNECTED WITH ATRA KEYS AT EACH INTERLEAF AND END TO END CONNECTION.
5. CUT THE GEOWEB PANELS TO FIT CLOSELY TO THE ROOT BALL. CONNECT THE CUT PANELS TO THE ADJACENT PANELS WITH ATRA KEYS.
6. LIMIT THE DROP OF THE INFILL TO PREVENT PANEL DISTORTION.

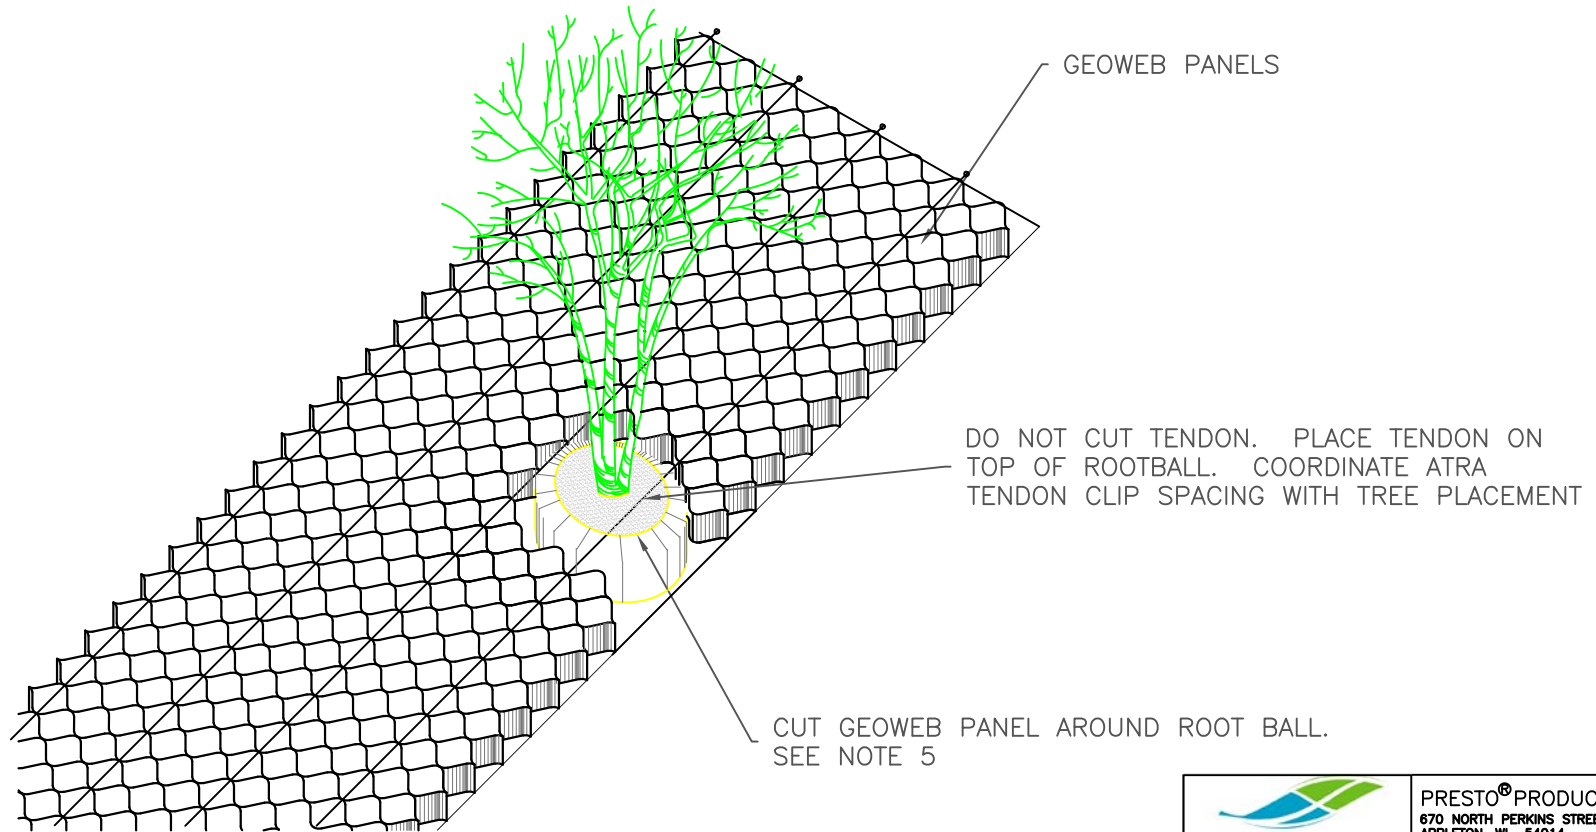

	PRESTO® PRODUCTS CO. 670 NORTH PERKINS STREET APPLETON, WI 54914 920-738-1328 WWW.PRESTOGEO.COM
	PRESTO®, GEOWEB®, AND ATRA® ARE REGISTERED TRADEMARKS OF PRESTO PRODUCTS.

THIS DRAWING IS COPYRIGHTED AND BASED UPON THE USE OF GENUINE GEOWEB MANUFACTURED BY PRESTO GEOSYSTEMS. ANY USE OF THIS DRAWING FOR ANY PRODUCT OTHER THAN THAT MANUFACTURED BY PRESTO GEOSYSTEMS IS STRICTLY PROHIBITED.		GENUINE GEOWEB® SLOPE WITH LANDSCAPE ELEMENTS	
		DATE NOVEMBER 2019	FILE NAME GWSL7F.DWG
SCALE NTS	SHEET 1	© 2010 PRESTO GEOSYSTEMS	