




STEP 1 - DETERMINE CUT ANGLE




STEP 2 - CUT GEOWEB SECTION



STEP 3 - TURN ONE SECTION OVER

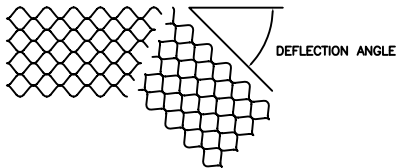


STEP 4 - ALIGN CUT ENDS

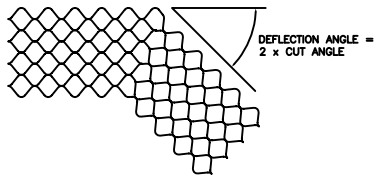


STEP 5 - STAPLE CUT ENDS

GEOWEB WALL BEND CUT DETAILS
STANDARD COLOR FACE - MINIMUM WASTAGE

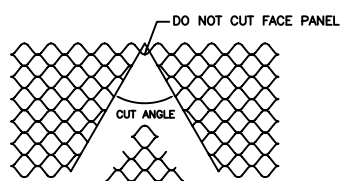


STEP 1 - CUT AND REMOVE SECTION

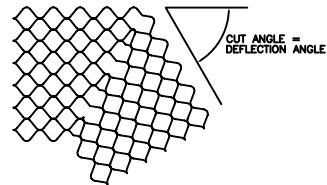


STEP 2 - ALIGN CUT ENDS AND STAPLE

INSIDE CORNER

FIT AND STAPLE CUT SECTIONS TO MINIMIZE WASTAGE

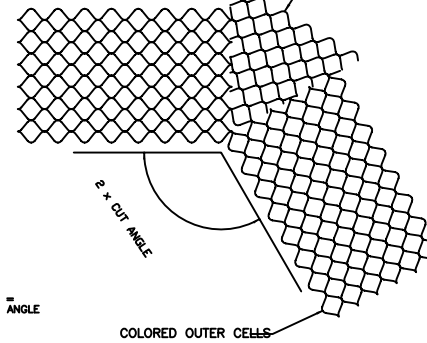


STEP 1 - CUT AND REMOVE SECTION

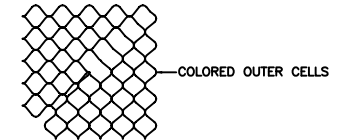

STEP 2 - ALIGN CUT ENDS AND STAPLE

90 DEGREE OUTSIDE CORNER

GEOWEB WALL BEND CUT DETAILS - COLORED FRONT FACE

	PRESTO PRODUCTS CO. 670 NORTH PERKINS STREET APPLETON, WI 54914 920-738-1342 WWW.PRESTOCEO.COM	
	GENUINE GEOWEB® CORNER AND BEND DETAILS	
<small>PRESTO®, GEOWEB®, AND ATRA® ARE REGISTERED TRADEMARKS OF PRESTO PRODUCTS.</small>		
DATE	NOVEMBER 2019	FILE NAME GWRW3F.DWG
SCALE	NTS	SHEET 1 © 2015 PRESTO GEDSYSTEMS