


1n BEVEL CUTS ON I-JOIST

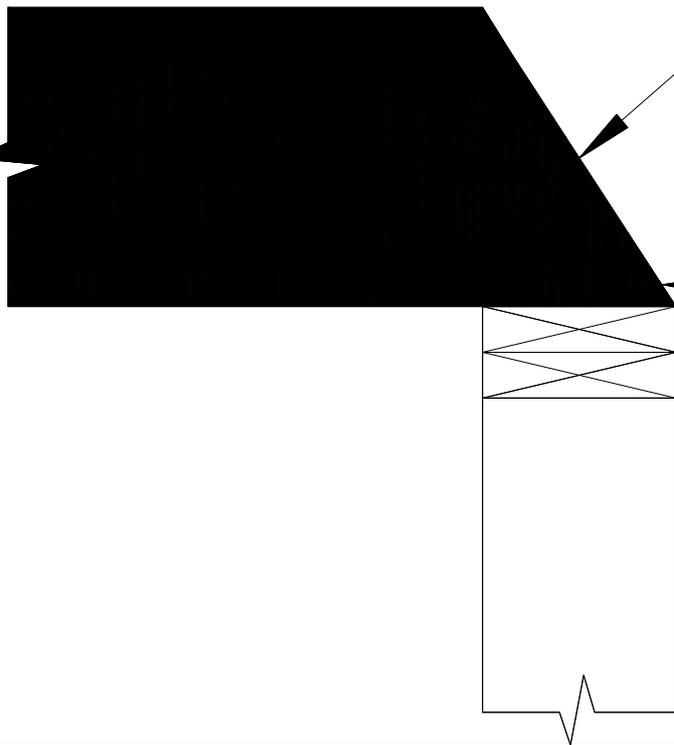

Do not bevel-cut joist beyond inside face of wall

Attach RFPI-Joist to top plate with **one 8d nail each side** of the flange at bearing.

To avoid splitting flange, install nails a minimum of 1½" from end of I-joist. Nails may be driven at an angle to avoid splitting of bearing plate.

Note: Blocking required at bearing for lateral support, not shown for clarity.