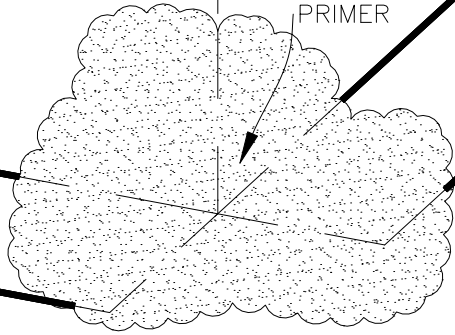
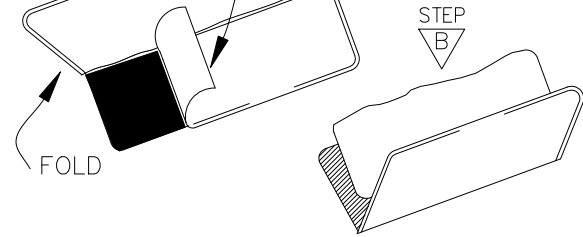


1

EPDM  
PRIMER

CLEAN EPDM SPLICE AREA PRIOR TO  
APPLYING EPDM PRIMER.


2

STEP  
ACLEAR POLY  
RELEASE PAPERSTEP  
B

PRIOR TO PLACEMENT OF SURE-SEAL  
CORNER, PEEL OFF THE BLUE POLY RELEASE  
FILM AND HEAT THE FLASHING SIDE WITH A  
HEAT GUN. RE-APPLY THE POLY LOOSELY.  
FOLD THE FLASHING IN HALF.


3

FIRMLY PRESS

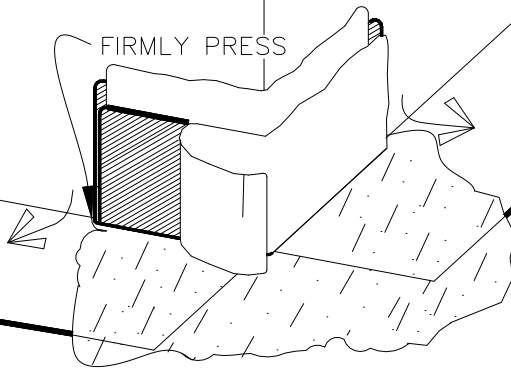


PLACE VERSIGARD INSIDE/OUTSIDE CORNER  
AS SHOWN AND REMOVE RELEASE PAPER.  
PRESS FOLDED FLASHING TIGHTLY INTO  
ANGLE CHANGE AND FIRMLY PRESS  
FLASHING AGAINST THE VERTICAL SURFACE.

4

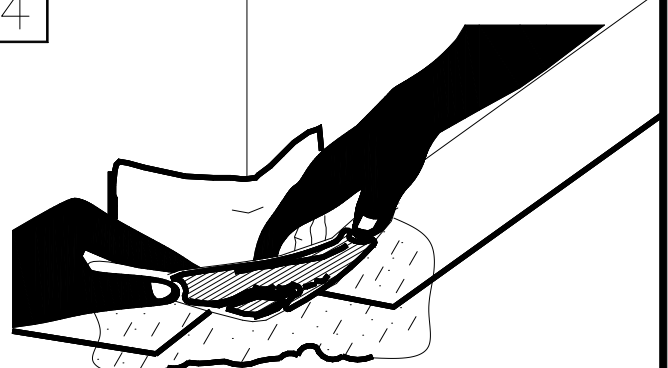

PLACE FOLDED FLASHING TIGHTLY INTO ANGLE  
CHANGE AND FIRMLY PRESS FLASHING ONTO  
THE DECK FLANGE BY PRESSING THE FLASHING  
AGAINST THE HORIZONTAL SURFACE.

5

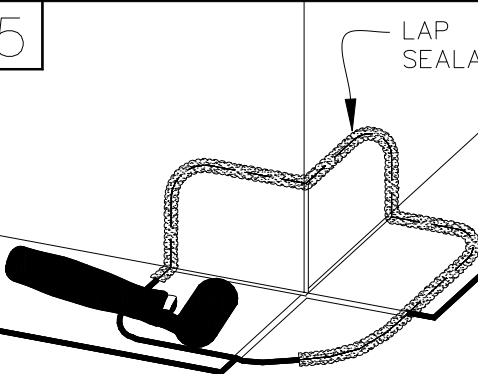LAP  
SEALANT

ROLL WITH A TWO INCH WIDE ROLLER. PAY  
PARTICULAR ATTENTION TO THE STEP OFFS  
AND ANGLE CHANGE.


## NOTE:

FOR PROJECTS WITH 25 & 30-YEAR WARRANTIES  
OR WHEN USING 90-MIL MEMBRANE, REFER TO  
DETAIL VGC-15.7A FOR REQUIRED FLASHING  
ENHANCEMENTS.

MAXIMUM WARRANTY: 20 YEARS



OUTSIDE CORNER WITH  
PRE-CUT QUICK-APPLIED  
CORNER

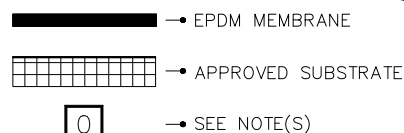

THERMOSET  
ROOFING SYSTEM  
VGC-15.5