


## NOTES:


- 1. WHEN MECHANICAL FASTENERS ARE USED TO PENETRATE THE METAL COUNTER-FLASHING, USE EPDM WASHERS, APPLY WATER CUT-OFF MASTIC UNDER THE COUNTER-FLASHING OR CAULK THE FASTENER HEADS.
- 2. LAP SEALANT IS REQUIRED ON CUT-EDGES OF REINFORCED MEMBRANE.
- 3. SEAM PLATES AND FASTENERS MAY BE INSTALLED INTO THE STRUCTURAL DECK AND THEN HPX FASTENERS AND POLYMER SEAM PLATES ARE REQUIRED FOR MECHANICALLY—FASTENED ROOFING SYSTEMS OVER STEEL DECKS.
- 4. MEMBRANE SPLICES SHALL INCORPORATE 6" (15cm) WIDE QA SEAM TAPE FOR PROJECTS WITH 25 AND 30—YEAR WARRANTIES.
- 5. IF THE VERTICAL SPLICE ON THE CURB FLASHING IS NOT LOCATED AT THE CORNER, USE DETAIL VGC-2.3 FOR EPDM MEMBRANE SPLICES AT ANGLE CHANGES.



MAXIMUM WARRANTY: 30 YEARS

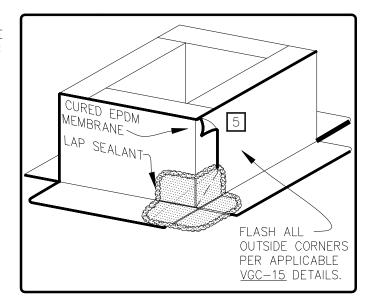

CURB FLASHING — EPDM MEMBRANE



THERMOSET ROOFING SYSTEM