




- 1. APPROXIMATELY 1/8" (0.5cm) DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF REINFORCED TPO MEMBRANE.
- 2. PLACE A LAYER OF THERMOPLASTIC MEMBRANE UNDER THE METAL CAP TO PROTECT AGAINST MOISTURE INFILTRATION AT JOINTS.
- 3. FASTEN COATED METAL FLASHING TO WOOD NAILERS USING 1-1/2" (4cm) MIN. RING SHANK NAILS SPACED 6" (15cm) ON CENTER AND STAGGERED APPROX. 1/2" (1.5cm).

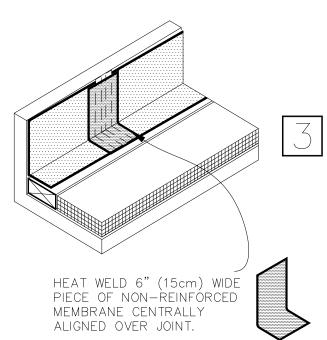



COATED METAL WALL FLASHING

→ THERMOPLASTIC REINFORCED MEMBRANE → APPROVED SUBSTRATE

0

→ SEE NOTE(S)

THERMOPLASTIC ROOFING SYSTEM