


NOTES:

- ON EXISTING WARRANTED ROOFS, SEEK WRITTEN APPROVAL OF ITS MANUFACTURER FOR ACCEPTANCE OF THIS DETAIL. FOR EXISTING BALLASTED SYSTEMS BY OTHERS, CONSULT RESPECTIVE MANUFACTURER FOR ACCEPTABLE GRAVEL CONTAINMENT TO PREVENT GRAVEL MIGRATION.
- EXISTING EPDM/TPO MEMBRANES: CLEAN THE SEAMING AREA WITH WEATHERED MEMBRANE CLEANER AND ALLOW TO DRY. APPLY APPROVED PRIMER.

EXISTING PVC OR KEE MEMBRANES: IF EXISTING MEMBRANE IS NOT ACCEPTABLE FOR WELDING, UTILIZE STEP 1 ACTIVATOR AND STEP 2 PRIMER PROCESS.
- WHEN USING 80-MIL PVC/KEE HP REINFORCED THERMOPLASTIC MEMBRANE, APPLY A 4-1/2" (11cm) DIAMETER THERMOPLASTIC T-JOINT COVER AT ALL FIELD SPLICE INTERSECTIONS.
- WATER CUT-OFF MASTIC MUST BE HELD UNDER CONSTANT COMPRESSION. WHEN RE-ROOFING OVER PRECAST CONCRETE, APPLY LIBERAL BEAD OF WATER CUT-OFF MASTIC IN JOINTS TO PREVENT MOISTURE MIGRATION.



PVC/KEE HP TIE-IN TO EXISTING SINGLE-PLY ROOF MEMBRANES ON CONCRETE DECK

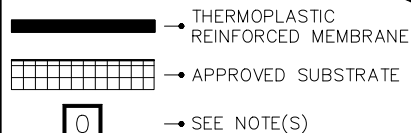

THERMOPLASTIC ROOFING SYSTEM

TPC-13.7