



NOTES:

- 1. FASTEN COATED METAL FLASHING TO WOOD NAILERS USING 1-1/2" (38mm) MIN. RING SHANK NAILS SPACED 6" (15cm) ON CENTER AND STAGGERED APPROX. 1/2" (1.5cm).
- 2. REFER TO THERMOPLASTIC <u>TPC-5.2</u> DETAIL FOR FLASHING VERTICAL JOINTS IN COATED METAL.

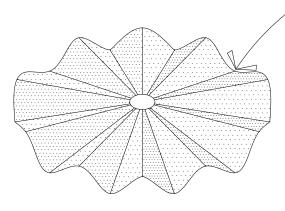


OUTSIDE CORNER BEFORE INSTALLATION

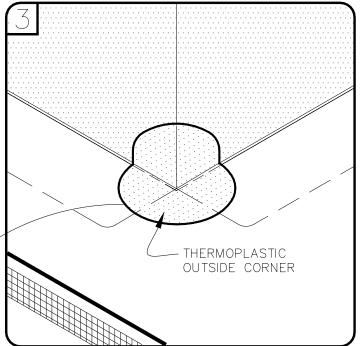



OUTSIDE CORNER WITH COATED METAL WALL FLASHING



THERMOPLASTIC ROOFING SYSTEM

TPC-15.6