



NOTES:

- WOOD NAILER MUST EXTEND PAST TOTAL WIDTH OF COATED METAL DECK FLANGE.
- 2. WHEN MECHANICAL FASTENERS ARE USED TO PENETRATE THE METAL COUNTER-FLASHING, USE EPDM WASHERS, APPLY WATER CUT-OFF MASTIC UNDER THE COUNTER-FLASHING OR CAULK THE FASTENER HEADS.
- 3. APPROXIMATELY 1/8" (0.5cm) DIAMETER BEAD OF CUT-EDGE SEALANT IS REQUIRED ON CUT EDGES OF REINFORCED TPO MEMBRANE.
- 4. FASTEN COATED METAL USING 1-1/2" (4cm) MIN. RING SHANK NAILS AT 6" (15cm) STAGGERED APPROX. 1/2" (1.5cm).



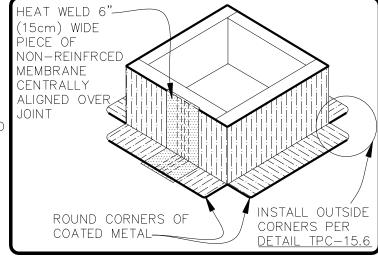

COATED FLASHING WITH TPO OR PVC METAL CURB FLASHING



THERMOPLASTIC ROOFING SYSTEM

TPC-5.2