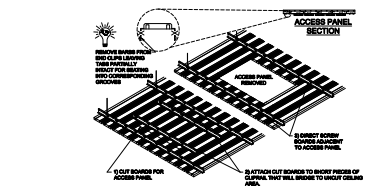
ACCESS PANEL SECTION
REMOVE BARES FROM END CLIPS LEAVING THEM PARTIALLY INTACT FOR SEATING INTO CORRESPONDING GROOVES
ACCESS PANEL REMOVED
2) DIRECT SCREW BOARDS ADJACENT TO ACCESS PANEL
1) CUT BOARDS FOR ACCESS PANEL
3) ATTACH CUT BOARDS TO SHORT PIECES OF CLIPRAIL THAT WILL BRIDGE TO UNCUT CEILING AREA.

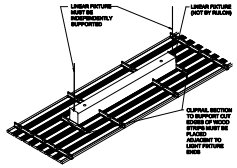
LINEAR FIXTURE MUST BE INDEPENDENTLY SUPPORTED
LINEAR FIXTURE (NOT BY RULCH)
CLIPRAIL SECTION TO SUPPORT CUT EDGES OF WOOD STRIPS MUST BE PLACED ADJACENT TO LIGHT FIXTURE EDGE